WA20F9A8D*

Automatic Electric Washing Machine

user manual

Planet First 100% Recycled Paper

This manual is made with 100% recycled paper.

Imagine the possibilities

Thank you for purchasing this Samsung product.

SAMSUNG

F900A_IB_DC68-03133M-05_EN.indd 1 2015/7/28 10:38:48

key features of your new washer

1. Large Capacity

Even bulky garments and blankets get super clean. Samsung's large capacity washer provides the room clothes need for a more thorough, cleaner wash.

2. AquaJet™

AquaJet™ washes loads gently and more thoroughly than conventional top loaders. Sprayed water allows detergent to distribute evenly and penetrate fabrics faster and deeper. AquaJet™ delivers improved cleanliness and advanced fabric care.

3. Digital Inverter Motor

The power to handle anything! Our direct-drive inverter motor delivers power right to the washer tub from a variable speed, reversible motor. The beltless direct-drive motor generates a higher spin speed for more effective, quiet operation. The washer also has fewer moving parts, meaning fewer repairs.

4. Mist Shower

A separate nozzle sprays water equally throughout the tub so that the rinse cycle is effective even with a small amount of water.

5. VRT® (Vibration Reduction Technology)

This Samsung washer performs smoothly at top spin speeds, minimizing noise and vibration.

6. Eco Plus

If you select this option, the water temperature is set to slightly lower than during the normal wash course to save energy.

7. Eco Tub Clean

Clean your drum with one button! Eco Tub Clean is specially designed to remove detergent residue and dirt bulidup in the tub, without the need for special chemical detergents.

8. My Cycle

This is a convenient function that enables you to save a frequently-used wash course. Once this is set, you can do a wash simply by pressing the Power, My Cycle, and Start buttons in sequence.

9. Smart Check

Samsung's Smart Check, an automatic error-monitoring system, detects and diagnoses problems at an early stage and provides quick and easy solutions.

10. Sanitize

When you select the NSF certifi ed Sanitize cycle, the water heats to an extra high temperature and removes 99.9% of certain bacteria typically found on clothing, bedding, or towels. This certifi cation is awarded by NSF International, an independent third-party testing and certifi cation organization.

Please check the garment care label to avoid garment damage. Only sanitizing cycles have been designed to meet the requirements of this protocol for sanitization efficacy.

F900A_IB_DC68-03133M-05_EN.indd 2 2015/7/28 10:38:48

safety information

Congratulations on your new Samsung Washer. This manual contains important information on the installation, use, and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

WARNING	Hazards or unsafe practices that may result in **severe personal injury or death**. To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:
CAUTION	Hazards or unsafe practices that may result in **minor personal injury or property damage**.

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.
	Note

These warning icons are here to prevent injury to you and others.

Please heed them explicitly.

After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

F900A_IB_DC68-03133M-05_EN.indd 3 2015/7/28 10:38:48

safety information

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

F900A_IB_DC68-03133M-05_EN.indd 4 2015/7/28 10:38:48

WARNING CRITICAL INSTALLATION WARNINGS

Plug the power cord into an AC 230 V / 60 Hz/wall socket rated at 15 amps or higher. Use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances, using a power strip, or extending the power cord may result in electric shock or fire.
- Do not use an electric transformer. It may result in electric shock or fire.
- Ensure that the power voltage, frequency, and current match the product's specifications. Failing to do so may result in electric shock or fire.

Have this appliance installed by a qualified technician or service company.

- Failing to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failing to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- Improper grounding may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly. Make sure the socket you use is grounded in accordance with local and national codes.

Do not install this appliance near a heater or inflammable material.
Do not install this appliance in a humid, oily, or dusty location, or in a location exposed to direct sunlight or water (rain drops).
Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Plug the power plug into the wall socket firmly. Do not use a damaged power plug, damaged power cord, or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.
Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failing to do so may result in electric shock or fire.

If the power plug or power cord are damaged, contact your nearest service center.

F900A_IB_DC68-03133M-05_EN.indd 5 2015/7/28 10:38:48

safety information

CAUTION INSTALLATION CAUTIONS

Position the appliance so that the power plug is easily accessible.
- Failing to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.
- Failing to do so may result in abnormal vibrations, noise, or problems with the product.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.
- Failing to do so may result in electric shock or fire.

WARNING CRITICAL USAGE WARNINGS

If the appliance is flooded, cut the power immediately and contact your nearest service center.
If the appliance emits a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact your nearest service center.
- Failing to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate the area immediately. Do not turn any appliance or light on or off.
- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.
- This may result in electric shock, fire, or an explosion.

Do not force the washer lid open while the washer is operating (high-temperature washing/drying/spinning).
- Water flowing out of the washer may cause burns or cause the floor to be slippery. This may result in injury.
- Forcing the lid open can damage the product or cause injury.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

Do not insert your hand under the washer.
- This may result in injury.

F900A_IB_DC68-03133M-05_EN.indd 6 2015/7/28 10:38:48

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while the washer is in operation.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may suffocate.

Do not let children or infirm persons use this washer unsupervised.

- Failing to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as cooper, steel wire, etc.) other than the standard fuse.
- If you need to repair or reinstall the appliance, contact your nearest service center.
- Failing to do so may result in electric shock, fire, problems with the product, or injury.

If any foreign substance such as water enters the appliance in any area other than the tub, unplug the power plug and contact your nearest service center.

- Failing to do so may result in electric shock or fire.

If the water supply hose comes loose from the faucet and floods the appliance, unplug the power plug.

- Failing to do so may result in electric shock or fire.

CAUTION USAGE CAUTIONS

If the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp, soft cloth.

- Failing to do so may result in discoloration, deformation, damage or rust.

The clear portion of the lid can be broken by a strong impact. Take care when using the washer.

- If the clear portion is cracked or broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the faucet slowly.

Open the faucet slowly after a long period of non-use.

- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.

- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Do not insert your hand under the washer.

- This may result in injury.

F900A_IB_DC68-03133M-05_EN.indd 7 2015/7/28 10:38:48

Insert the laundry into the washer completely so that laundry does not get caught in the lid.
- If laundry gets caught in the lid, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the faucet is turned off when the washer is not being used.
- Ensure that the water supply hose connectors are properly tightened.
- Failing to do so may result in property damage or injury.

Open the faucet and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.
- If the water supply hose connectors are loose, it may result in water leakage.

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
- This may result in electric shock, fire, problems with the product, or injury.

Do not operate the appliance with wet hands.
- This may result in electric shock.

Do not spray volatile material such as insecticide onto the surface of the appliance.
- As well as being harmful to humans, it may also result in electric shock, fire,or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.
- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.
- This may result in burns or injury.

Do not wash, spin, or dry water-proof seats, mats, or clothing*.
- Do not wash thick, hard mats even if the washer mark is on the care label. This may result in injury or damage to the washer, walls, floor, or clothing due to abnormal vibrations.

* Items not to wash: Woolen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when detergent dispenser is removed.
- This may result in electric shock or injury due to water leakage.

Do not insert your hand into the detergent dispenser after opening it.
- This may result in injury as your hand may be caught.

F900A_IB_DC68-03133M-05_EN.indd 8 2015/7/28 10:38:48

Do not place any non-laundry objects, such as shoes, food waste, or animals into the washer.

- This can cause abnormal vibrations that can damage the washer, and, in the case of pets, cause severe injury or death.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams, or lotions usually found in skincare shops or massage clinics.

- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects (safety pins, hair pins, etc.) or bleach in the tub for long periods of time.

- This may cause the tub to rust.
- If rust appears on the surface of the tub, apply a neutral cleansing agent to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to heat from the oxidation of the oil.

Do not use hot water from water cooling/heating devices.

- This may result in problems with the washer.

Do not use natural hand-washing soap in the washer.

- If it hardens and accumulates inside the washer, it may cause problems with the product, discoloration, rust, or bad odors.

Do not wash large laundry items such as bedding in the washing net.

- Failing to do so may result in injury due to abnormal vibrations.
- Place smaller items, such as lace socks and lingerie in the washing net.

Do not use hardened detergent.

- If it accumulates inside the washer, it may result in water leakage.

Do not wash throw rugs or doormats.

- If you wash throw rugs or doormats, the sand will accumulate inside the washer. It may result in error such as no draining.

WARNING CRITICAL CLEANING INSTRUCTIONS

Do not clean the appliance by spraying water directly onto it.
Do not use the strong acid cleaning agent.
Do not use benzene, thinner, or alcohol to clean the appliance.

- This may result in discoloration, deformation, damage, electric shock, or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failing to do so may result in electric shock or fire.

F900A_IB_DC68-03133M-05_EN.indd 9 2015/7/28 10:38:48

contents

INSTALLING YOUR WASHER 11

11 Unpacking your washer
11 Overview of your washer
12 Basic location requirements
12 Electrical
12 Grounding
12 Water
13 Drain facility
13 Flooring
13 Location considerations
13 Alcove or closet installation
14 Required dimensions for Installation
14 Important note to installer

OPERATING INSTRUCTIONS 18

18 Loading your washer
18 Getting started

WASHING A LOAD OF LAUNDRY 19

19 Overview of the control panel
21 Child Lock [ ]
22 Signal
22 Garment Plus
22 My Cycle
22 Delay Start
23 Pre Soak
23 AquaJet™
23 Eco Plus
23 Mist Shower
23 Smart Check
24 Washing clothes using the cycle selector
25 Features

MAINTAINING YOUR WASHER 28

28 Cleaning the exterior
28 Cleaning the interior
28 Storing your washer
28 Preserving the top cover and the front frame
29 Cleaning the dispensers
30 Eco Tub Clean

TROUBLESHOOTING 31

31 Check these solutions if your washer…
33 Information codes

APPENDIX 35

35 Fabric care chart
36 Cycle chart
37 Helping the environment
37 Specification

F900A_IB_DC68-03133M-05_EN.indd 10 2015/7/28 10:38:48

installing your washer

UNPACKING YOUR WASHER

Unpack your washer and inspect it for shipping damage. Make sure you have received all the items shown below. If your washer was damaged during shipping, or you do not have all of the items, contact 8002474357.

To prevent personal injury or strain, wear protective gloves whenever lifting or carrying the unit.

WARNING Packing materials can be dangerous to children; Keep all packing material (plastic bags, polystyrene, etc.) well out of childrens' reach.

OVERVIEW OF YOUR WASHER

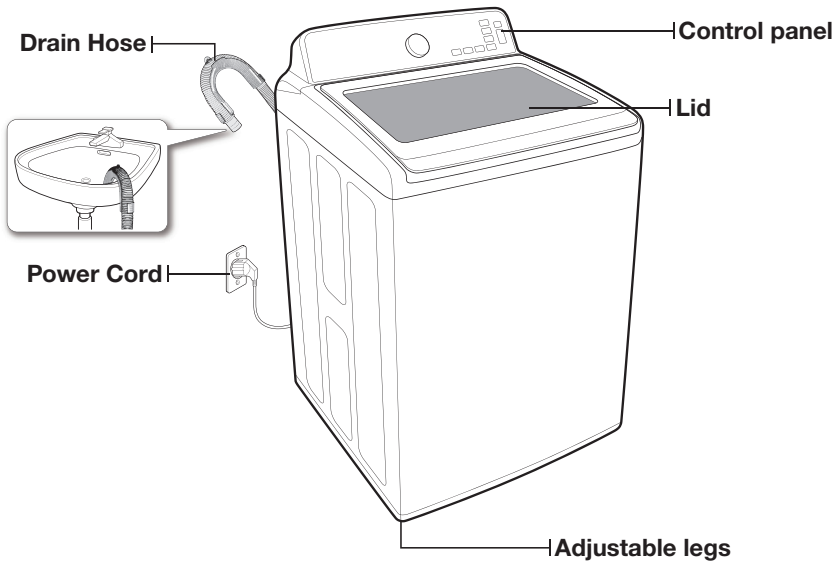

Parts supplied

Hose guide

User manual book


Plastic zip hose tie


Water intake cap


Water supply hoses

Tools needed

Wrench


Flat screwdriver


Level

F900A_IB_DC68-03133M-05_EN.indd 11 2015/7/28 10:38:49

installing your washer

BASIC LOCATION REQUIREMENTS

Electrical

- 230 Volt 60 Hz 15 AMP fuse or circuit breaker
- Individual branch circuit serving only your Washer is recommended.
- Your Washer is equipped with a power cord.

CAUTION NEVER USE AN EXTENSION CORD.

Grounding

ELECTRICAL GROUNDING IS REQUIRED FOR THIS APPLIANCE.

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.

This appliance is equipped with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING An improperly connected equipment-grounding conductor can increase the risk of electrical shock. Check with a qualified electrician or serviceman if you are not sure whether the appliance is properly grounded. Do not modify the plug provided with the appliance – if it does not fit the outlet, have a proper outlet installed by a qualified electrician.

IMPORTANT SAFETY PRECAUTIONS

- To prevent unnecessary risk of fire, electrical shock or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No. 70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.

CAUTION NEVER CONNECT THE GROUND WIRE TO PLASTIC PLUMBING LINES, GAS LINES, OR HOT WATER PIPES.

Water

To correctly fill your Washer in the proper amount of time, water pressure of 20 to 116psi (137 to 800kPa) is required.

Water pressure less than 20 psi may cause water valve failure, or may not allow the water valve to shut off completely, or may extend the fill time beyond what your Washer controls allow, causing your Washer to turn off. A time limit is built into the controls to prevent flooding in your home if a hose becomes loose.

The water faucets must be within 4 feet / 122 cm of the back of your Washer to match the inlet hoses provided with your Washer.

Accessory inlet hoses are available in various lengths up to 10 feet / 275 cm for faucets that are further away from the back of your Washer.

To avoid the possibility of water damage:

- Have water faucets easily accessible
- Turn off faucets when the washer is not in use.
- Periodically check that there is no leakage from the water inlet hose fittings.

WARNING CHECK ALL CONNECTIONS AT THE WATER VALVE AND FAUCET FOR LEAKS.

F900A_IB_DC68-03133M-05_EN.indd 12 2015/7/28 10:38:49

Drain facility

The recommended height of the standpipe is 39 in / 99 cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached to the washer at the factory.

Flooring

For best performance, you must install your washer on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced load situations. Carpeting and soft tile surfaces are contributing factors to vibration which can cause your washer to move slightly during the spin cycle.

Never install your washer on a platform or weakly supported structure.

Location considerations

Do not install your washer in areas where water may freeze, since your washer will always retain some water in its water valve, pump, and hose areas. Frozen water can damage the belts, the pump, hoses, and other components.

Alcove or closet installation

MINIMUM CLEARANCES FOR CLOSET AND ALCOVE INSTALLATIONS:

Sides – 1 in / 25 mm

Rear – 6 in / 152 mm

Closet Front – 2 in / 51 mm

TOP - 21 in / 533 mm

Gap between end of water valve and the wall

- Case 1. Assemble supply hose after installing : Over 3.9 in (10 cm).
- Case 2. Assemble supply hose before installing : Over 2.8 in (7cm).

If the washer and dryer are installed together, the closet front must have at least a 72 in^2 (465 cm^2) unobstructed air opening. Your washer alone does not require a specific air opening.

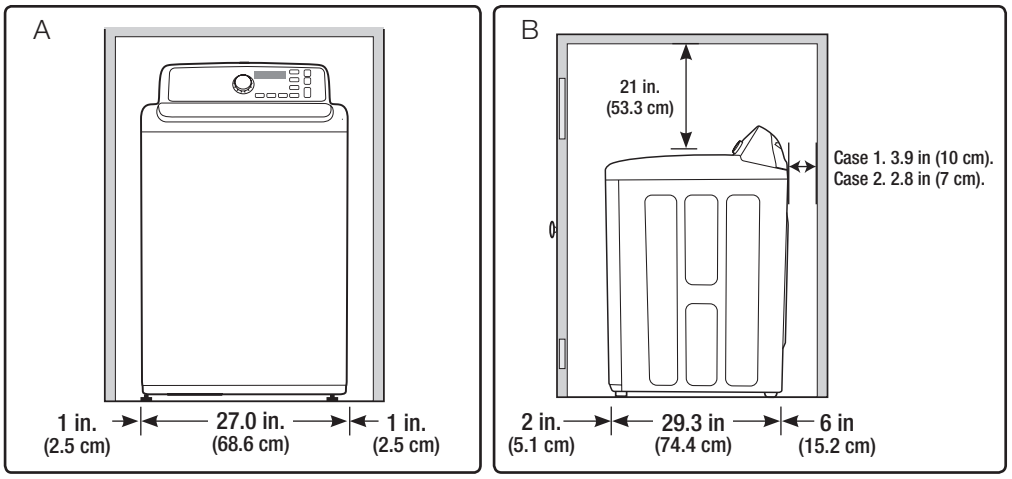

A. Recessed area

B. Side view - closet or confined area

F900A_IB_DC68-03133M-05_EN.indd 13 2015/7/28 10:38:49

installing your washer

Required dimensions for Installation

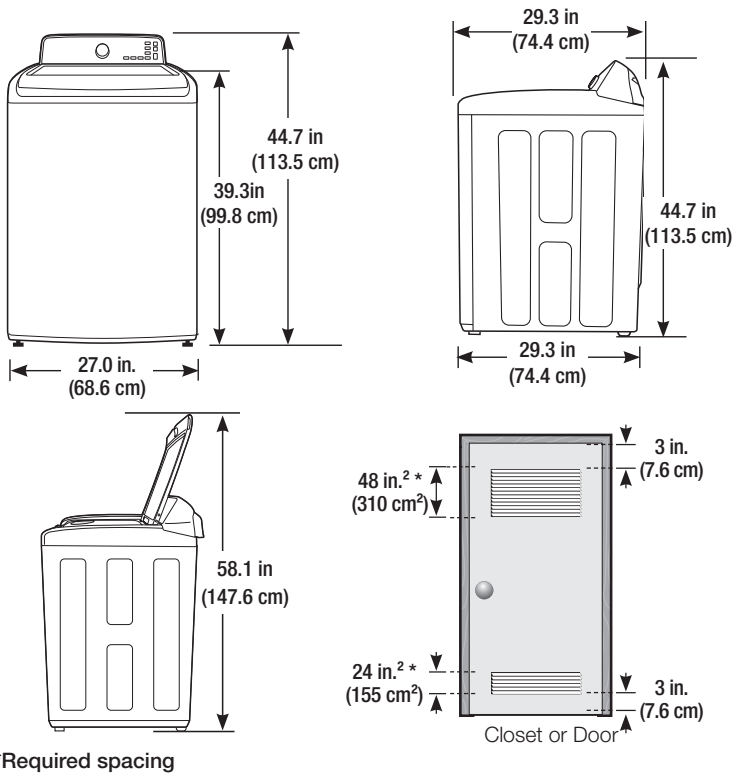

*Required spacing

IMPORTANT NOTE TO INSTALLER

Please read the following instructions carefully before installing your washer.

These instructions should be retained for future reference.

We recommend you hire a professional to install this washer.

Installation Flow chart

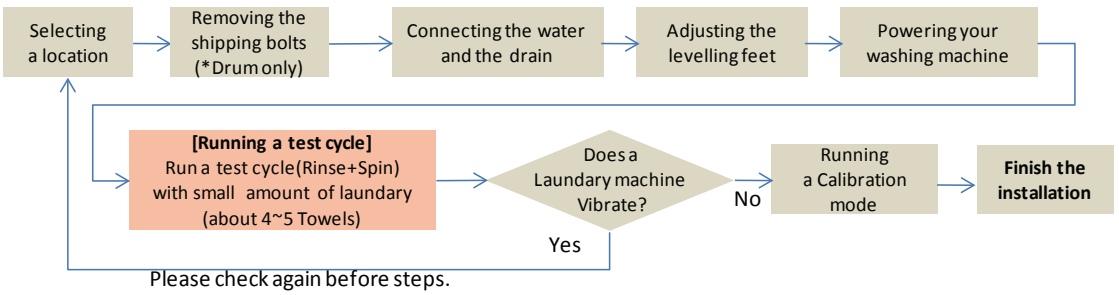
Selecting a location
Removing the shipping bolts (*Drum only)
Connecting the water and the drain
Adjusting the levelling feet
Powering your washing machine
[Running a test cycle]
Run a test cycle(Rinse+Spin) with small amount of laundary (about 4~5 Towels)
Does a Laundary machine Vibrate?
No
Running a Calibration mode
Finish the installation
Yes
Please check again before steps.

STEP 1 Selecting a Location

Before you install the washer, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation.
- Is away from direct sunlight.
- Has adequate ventilation.
- Is not exposed to freezing temperatures (temperatures under 32 °F or 0 °C).
- Is away from heat sources such as oil or gas.
- Has enough space so that the washer doesn't rest on its power cord.

F900A_IB_DC68-03133M-05_EN.indd 14 2015/7/28 10:38:50

STEP 2
Connecting the water and the drain

Connecting the water supply hose

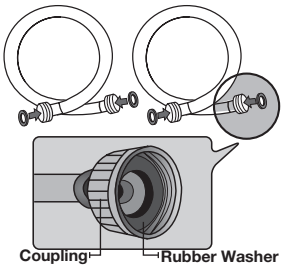

CAUTION Before installing the water supply hoses, make sure there are rubber gaskets inside the fittings at both ends of each new water hose. Installing the water supply hoses without rubber gaskets can cause water leakage.

CAUTION When you initially install the washer, be sure to use new hoses. Failing to do so may result in a water leakage or overflow and may damage your property.

CAUTION Do not connect multiple water supply hoses together to increase the length of the supply hose. Hoses connected this way can leak and the leakage can cause electrical shock. If a hose is too short, replace the hose with a longer, high pressure hose.

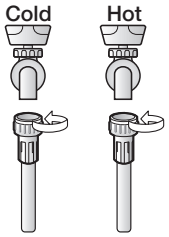

1. Connect the ends of the water supply hoses to the HOT and COLD faucets.
2. Tighten the fittings by hand until they are snug, and then tighten them an additional two-thirds of a turn with a wrench.

   CAUTION When you fasten the fittings, do not fasten them too tightly or apply tape or sealant to the faucets or water supply intakes. This can damage the fittings.

   After you have connected the water supply hoses to the faucets, ensure that they are connected correctly by pulling the water supply hoses downwards

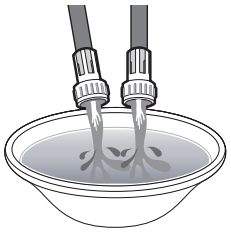

3. Place the unconnected ends of the hoses into a bucket and open the faucets connected to the two water supply hoses for 10 or 15 seconds to remove any foreign substances from the hoses. Close the faucets before continuing.
4. Connect the ends of the water supply hoses to the water supply intake connections at the back of the washer.

   CAUTION The water supply hose connected to the HOT faucet must be connected to the hot water supply intake and the water hose connected to the COLD faucet must be connected to the COLD water supply intake.

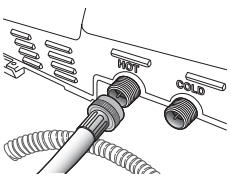

5. Tighten the fittings by hand until they are snug, and then tighten them an additional two-thirds of a turn with a wrench.

   To ensure the correct water usage, connect both the HOT and COLD water faucets. If either or both are not connected, an “4E” (no fill) error can occur.

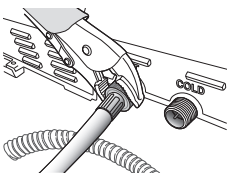

   If you do not want to use the HOT water supply hose, insert the water intake cap into the HOT water supply intake hole.

   CAUTION Confirm that the water supply hoses are not twisted or bent. If the hoses are twisted or bent, the hoses can leak and cause electric shock due to the water leakage.

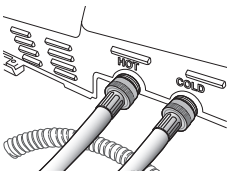

6. Turn on the HOT and COLD water supplies and check all the water supply intake connections and the faucets for water leaks.

F900A_IB_DC68-03133M-05_EN.indd 15 2015/7/28 10:38:50

installing your washer

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

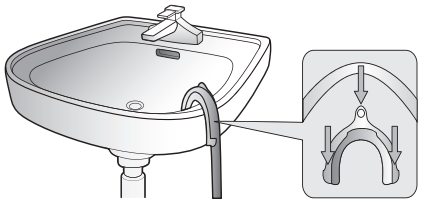

Over the edge of a wash basin

Secure the guide to the side of the basin wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

In a standpipe or laundry tub

The standpipe must be no shorter than 39 in (99 cm) and no longer than 96 in (245 cm).

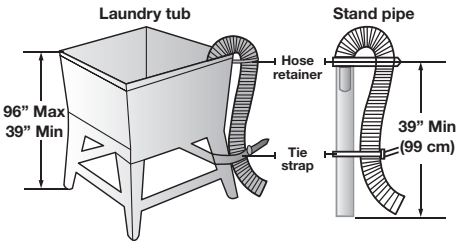

Make sure that the connection between the drain hose and the standpipe is not airtight.

Connection the hose guide within 4 in (10cm) from the end of the drain hose. If the drain hose is extended more than 4 in (10cm) beyond the end of the hose guide, mold or microorganisms could spread to the inside of the washer.

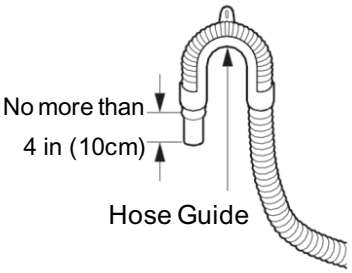

Drain Hose can be installed until 96 in (245cm) maximum. But drain capability can be reduced at this height. It causes the washer to have odor, because of remained water in the drain system.

If drain hose is installed below 39 in (99cm), water can be drained in cycle working cause of siphon phenomenon. It causes the washer to "4E" error.

STEP 3

Leveling your washer

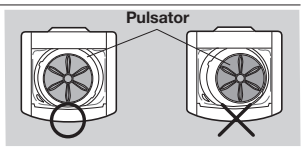

See if the washer is level by checking the position of the tub:

1. Slide the washer into position.
2. Open the lid of the washer, and pour the water into the tub to just below the pulsator level.

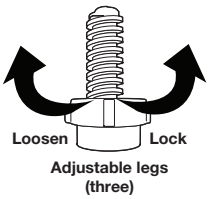

3. If the washer is level, the pulsator is positioned at the center of the water as shown in the figure. If not, level your washer by turning the front leveling feet clockwise or counterclockwise as necessary.

   Turn the front leveling feet clockwise to raise the washer, and counterclockwise to lower the washer.

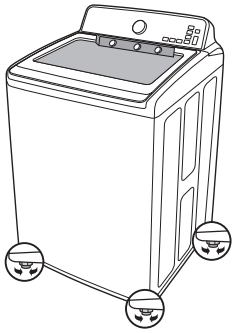

F900A_IB_DC68-03133M-05_EN.indd 16 2015/7/28 10:38:51

STEP 4
Powering your washer

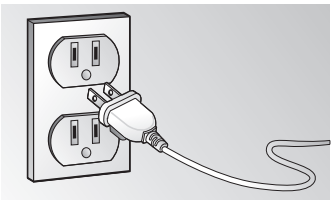

Plug the power cord into a 3-prong, well grounded 230 volt 60 Hz approved electrical outlet protected by a 15-amp fuse or comparable circuit breaker.

Your washer is grounded through the third prong of the power cord when plugged into a three-prong grounded electrical outlet.

Test run

Make sure that you install your washing machine correctly by running the **Rinse+Spin** cycle after the installation is complete.

STEP 5
Running a test cycle

Run a test cycle as follows to check if your washer is properly installed.

1. Load about 6 pounds of laundry into the tub.
2. Press the **Power** button to turn on your washer.
3. Select the Rinse+Spin cycle by turning the **Cycle Selector**.
4. Press the **Start/Pause** button to start the test cycle.
5. The washer should not rock or vibrate excessively when water is supplied or when washing or spinning, and should drain well during the spin cycle.

If water leaks while water is being supplied or drained, check the water connections. Refer to the “Connecting the water and the drain” section on pages 15~16 for instructions.

If the washer rocks and vibrates excessively, level your washer again. Refer to the “Leveling your washer” section on page 16 for instructions.

STEP 6
Calibration mode

Your Samsung washing machine detects the laundry weight automatically.
For more accurate weight detection, please run Calibration Mode after the installation.
To run Calibration Mode, follow these steps:

1. Remove laundry or any contents in the machine.
2. Press the Delay Start and Temp. buttons simultaneously, and then press the Power button. The machine turns on.
3. Press the **Start/Pause** button to activate “Calibration Mode”.
4. The pulsator rotates clockwise and counterclockwise for approximately 1 minute.
5. When “Calibration Mode” is finished, “End” appears on the display, and the machine automatically turns off. The washing machine is now ready for use.

F900A_IB_DC68-03133M-05_EN.indd 17 2015/7/28 10:38:51

operating instructions

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

LOADING YOUR WASHER

- Fill the tub with dry, unfolded clothes evenly around in order to enhance washing efficiency and prevent excess wear, or wrinkling of the load.

  - For optimal washing performance, make sure the laundry is piled up evenly.

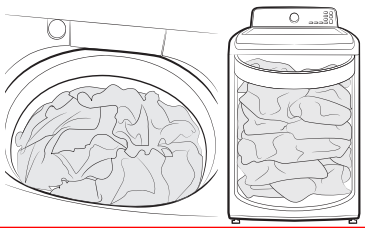

- Wash delicate items such as bras, hosiery, and other lingerie in the Delicates/Hand Wash cycle with similar lightweight items.
- When washing big bulky items or a few smaller items that don't fill the tub completely – a rug, a pillow, stuffed toys, or one or two sweaters, for example – add a few towels to improve spin performance.
- Do not insert bulky items except for Bedding in this cycle.

During the spin cycle, the washer may add additional water to redistribute the clothes and correct an imbalance inside the drum.

- When washing heavily soiled loads, do not overload your washer to ensure good cleaning results.
- To add a forgotten item:
  1. Press the **Start/Pause** button to pause the washer.
  2. Wait for the door to unlock automatically, and then open the door.
  3. Add the item, close the door, and then press the **Start/Pause** button. The cycle will resume.

GETTING STARTED

1. Load your washer.
2. Add liquid (or powder) detergent and additives to the dispenser (see pages 25~27).
3. Select the appropriate cycle and options for the load (see pages 19~24).
4. Close the lid.
5. Press the **Start/Pause** button.
6. The Wash Indicator light illuminates.
7. The estimated cycle time will appear in the display.
   The time may fluctuate to indicate the time remaining in the cycle better.

The actual time required for a cycle may differ from the estimated time in the display depending on the water pressure, water temperature, detergent, and laundry.

8. Before your washer starts to fill, it will make a series of clicking noises to check the door lock and do a quick drain.

- When the cycle is complete, the Door Lock light will go out and "End" will appear in the display.
- Pressing the **Power** button cancels the cycle and stops your washer.
- The Wash, Rinse ,and Spin indicator lights will illuminate during those portions of the cycle.

F900A_IB_DC68-03133M-05_EN.indd 18 2015/7/28 10:38:51

washing a load of laundry

OVERVIEW OF THE CONTROL PANEL

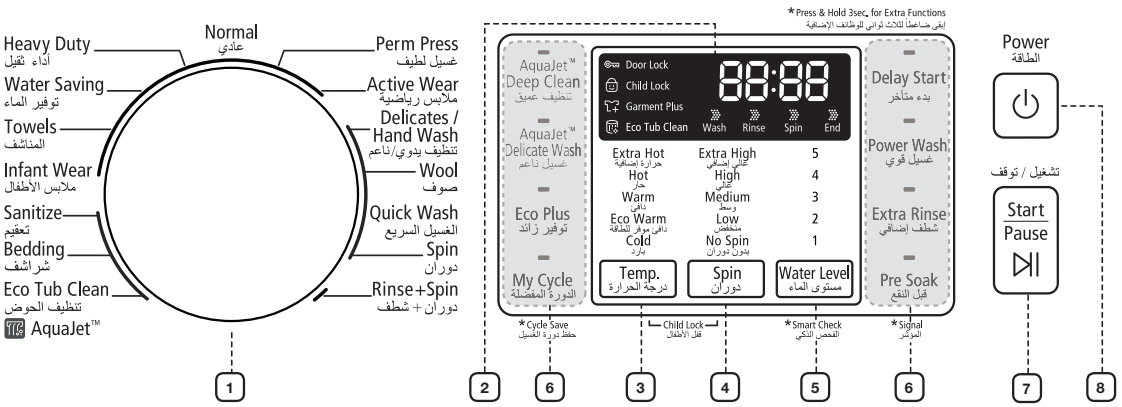

1 Cycle Selector

Select the appropriate cycle for the type of load.
The cycle you select determines the tumble pattern and spin speed for the cycle.

To minimize wrinkling of laundry, select the Perm Press cycle.

Normal - For most fabrics including cottons, linens, and normally soiled garments.

Heavy Duty - For sturdy, colorfast fabrics and heavily soiled garments.

Water Saving - This is a specially designed course that enables you to wash laundry effectively with the minimum amount of water. Water saving, Warm temperature, High spin, Normal soil is the program recommended for a normally soiled cotton load.

Towels - For bath towels, washcloths, and mats.

Infant Wear - For normally soiled baby/kids wear, small garments.

Sanitize - For heavily soiled, colorfast garments. A load should be less than 5.0 kg.

Bedding - For bulky items such as blankets and sheets. When you are washing comforters, use liquid detergent.

Eco Tub Clean - Use to clean dirt and bacteria from the drum. Regular use (after every 20 washes) is recommended. No detergent or bleach is needed (see page 30).

Perm Press - For wash-and-wear, synthetic fabrics, and lightly to normally soiled garments.

Active Wear - Use this cycle to wash exercise wear such as sports jerseys, training pants, shirts/tops and other performance clothing. This cycle provides effective soil removal with gentle action for special fabric care.

Delicates/Hand Wash - For sheer fabrics, bras, lingerie, silks, and other handwash-only fabrics. For best results, use liquid detergent.

Wool - For machine-washable wool. A load should be less than 4.0 kg.
• The Wool cycle washes laundry by moving the wash drum horizontally to maintain the characteristics of the wool fi bers and to prevent damage to the cloth. It then stops for a while to allow the laundry to soak in the water. This pause in the operation of the Wool cycle is normal.
• We recommend you use a neutral detergent to prevent damage to the cloth and to improve the washing results.

Quick Wash - For lightly soiled garments needed quickly.

Spin - Drains the water and spins at a high speed.

F900A_IB_DC68-03133M-05_EN.indd 19 2015/7/28 10:38:52

washing a load of laundry

	Rinse + Spin - Use for loads that need rinsing only or to add rinse-added fabric softener to a load.
2 **Display**	Provides instructions and diagnostics while keeping you updated on the cycle status and time remaining.
3 **Temperature selection button**	Press the button repeatedly to cycle through the different water temperature options. **Extra Hot** - Heavily soiled, colorfast items. Only available with the Sanitize cycle. **Hot** - Whites and heavily soiled, colorfast items. **Warm** - Colorfast items. **Eco Warm** - Moderately soiled, colorfast items; most wrinkle-free items. **Cold** - Brightly colored, very lightly soiled items.
4 **Spin selection button**	Press the button repeatedly to cycle through the different spin speed options. **Extra High** - Removes more water from loads during spin. **High** - Use for underwear, t-shirts, jeans, and sturdy cottons. **Medium** - Use for jeans, wrinkle-free or wash-and-wear items, and synthetics. **Low** - Use for delicate items needing a slow spin speed. **No Spin** - Drains your washer without spinning. Use for extremely delicate items that cannot tolerate any spin.
5 **Water Level button**	The water level is automatically adjusted. However, you can select the water level manually by pressing this button.
6 **Select Cycle Option**	Press these buttons to select different cycle options. **AquaJet™ Deep Clean** - Improve washing performance through longer AquaJet spray action. Water Level can be adjusted. **AquaJet™ Delicate Wash** - Minimize action of the pulsator, wash through spray and drum rotation only, improve the protection to fabric. **Eco Plus** - To increase your energy savings on your wash cycles. (Less hot water consumption) **My Cycle** - Press and hold for 3 seconds to Save. Create and/or use a cycle you create with customized temperature, spin, option, etc. **Delay Start** - Delay the start of any cycle for up to 24 hours in one-hour increments. Displayed hour indicates the time the wash will be started. **Power Wash** - You can control the strength of water fl ow when both washing and spinning by the digital inverter motor, with smarter way for your fabric. **Extra Rinse** - Change from spray rinse mode to deep rinse mode, and rinse once again. **Pre Soak** - Remove stains more thoroughly by specifying additional time.
7 **Start/Pause selection button**	Press to pause and restart cycles.
8 **Power button**	Press once to turn your washer on. Press again to turn your washer off. If the washer is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

F900A_IB_DC68-03133M-05_EN.indd 20 2015/7/28 10:38:52

Child Lock [🔒]

Child Lock prevents children from playing with your washer.

Activating the Child Lock function

Press and hold the **Temp.** and **Spin** buttons simultaneously for approximately 3 seconds.

- When you activate the Child Lock function, the “Child Lock [🔒]” lamp blinks.

Using the Child Lock function

If the lid is opened when the Child Lock function is on, “dE” is displayed and an alarm sounds.

- If the water level in the tub is above the safe water level, “dE” is displayed on the LED display and the washing machine starts to drain water by force after 30 seconds.
- If the water level in the tub is above the safe water level and the Child Lock function is turned on while the lid is open, “CL” is displayed on the LED display even if the power of the washing machine is turned off and the washing machine drains water by force.
- Even if the power of the washing machine is turned off, if the lid is opened while the water level in the tub is above the Reset water level, “CL” is displayed on the LED display without the alarm sounding and the washing machine starts to drain water. When the draining operation finishes, the power is automatically turned off again.
- You have activated the Child Lock function while the washing machine is running, the Start/Pause button will not work.
- After the compulsory drain, the “CL” code display blinks at 1 second intervals and the product enters the “CL” mode. (When the product is in the “CL” mode, only the **Power** button works.)
- To cancel the “CL” mode, you need to turn the power off and then on again.
- To cancel the “dE” mode, deactivate the Child Lock function. To deactivate the Child Lock function, press and hold the **Temp.** and the **Spin** buttons simultaneously for at least 3 seconds.

Adding laundry when Child Lock is on

- To add laundry, deactivate the Child Lock function. To deactivate the Child Lock function, press and hold the **Temp. and the Spin** buttons simultaneously for at least 3 seconds. See “Pause Option” on page 24 for additional details.

Deactivating the Child Lock function

Press and hold both the **Temp.** and **Spin** buttons simultaneously for approximately 3 seconds.

- When you deactivate the Child Lock function, the “Child Lock [🔒]” is turned off.
- The Child Lock function prevents children or the infirm from accidently operating the washer and injuring themselves.

WARNING

- If a child enters the washing machine, the child may become trapped and suffocate.

CAUTION

- Once you have activated the Child Lock function, it continues working even if the power is turned off.
- Forcing the lid open can result in injury or damage to the product.

To add laundry after you have activated the Child Lock function, you must first deactivate the Child Lock function.

F900A_IB_DC68-03133M-05_EN.indd 21 2015/7/28 10:38:52

washing a load of laundry

Signal

The Sound Off function can be selected during all courses.

Garment Plus

You can add or take out laundry items even after the wash has started, as long as the **"Garment Plus"** light is on. Pushing the **Start/Pause** button unlocks the lid. If you open the lid and want to continue the wash cycle, close the lid, and then press the **Start/Pause** button.

If you have activated Child Lock, you must deactivate it first. See page 21.

My Cycle

Lets you save a custom wash cycle (temperature, spin, etc.) and then recall and use it with one button convenience.

To save a cycle and selected options as your My Cycle, follow these steps:

1. Press the **Power** button.
2. Select a cycle using the **Cycle Selector**.
3. After cycle selection, set each option.

See the "Cycle Chart" on page 36 for available option settings with each cycle.

4. You can then store the selected cycle and options by pressing and holding the **My Cycle** button for longer than 3 seconds. The cycle and options you select will be displayed the next time you choose the My Cycle function.
5. Press the My Cycle button to load and use the saved My Cycle options. The "My Cycle" light will indicate activation. Also, the chosen course and option lights will flicker.

You can change the My Cycle settings by repeating the process above.
The last saved settings will be displayed the next time you choose the My Cycle function.

If you press My Cycle and release it within 3 seconds, the previously saved course and options appear. If you press and hold My Cycle for 3 second or longer, the currently set course and options are saved and the LED blinks for 3 seconds.

Delay Start

You can set the washing machine to start your wash automatically at a later time, by choosing a delay time.
The hour displayed indicates the time at which the wash will be started.

1. Set your wash course.
2. Press the **Delay Start** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The "Delay Start" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay Start function, press the **Power** button and then turn the washing machine on again.

F900A_IB_DC68-03133M-05_EN.indd 22 2015/7/28 10:38:52

Pre Soak

Use this function when the laundry is heavily contaminated or stained. This function improves the wash performance by adding a Pre Soak cycle.

- If you select this function, the total cycle time is increased by 15 minutes.
- When the Pre Soak cycle starts, the washing machine repeats a wash cycle after supplying water and then performs a 15-minute soak cycle.
- When the Pre Soak cycle is complete, the configured wash cycle starts without draining water.

AquaJet™

Through the strong spray and detergent water recirculation produced by the Pump of AquaJet™, wash can be more gentle and thorough than conventional top loaders.

- AquaJet™ Deep Clean: If AquaJet™ Deep Clean mode is selected, washing performance can be further improved by addition spray action. Sufficient water quantity can be ensured by adjusting Water Level.
- AquaJet™ Delicate Wash: Control pulsator action to the minimum, wash delicate fabrics through water spray and drum rotation, so as to minimize the damage to fabrics. When washing delicate fabrics, if much attention shall be paid to the washing force, select Delicates/Hand Wash cycle; if much attention shall be paid to the fabric care, select AquaJet™ Delicate Wash.

Courses	AquaJet™ Deep Clean	AquaJet™ Delicate Wash
Normal, Heavy Duty, Perm Press, Water Saving, Active Wear, Towels,Infant Wear, Rinse+Spin	Available	Not Available
Sanitize, Bedding, Eco Tub Clean, Wool, Quick Wash, Spin,	Not Available	Not Available
Delicates/Hand Wash	Not Available	Available

Eco Plus

This function sets the hot water target water frequency some what lower than the typical washing cycle and extends the wash time slightly. With laundry time slightly extended, it's possible to keep the same level of washing performance with cooler water. This function reduces energy consumption and maintains the quality of the wash.

Mist Shower

Mist Shower sprays water from a nozzle that is independent of the main water supply system. This soaks the laundry with water from the beginning of the wash cycle and ensures an effective wash even with a small amount of water.

(The Mist Shower function may not work if there are many laundries.)

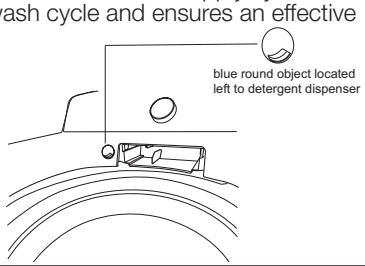

Smart Check

This function enables you to check the status of the washing machine using a smartphone.

1. To enable the Smart Check function, press and hold the Water Level key for 3 seconds after turning the power on or when an error occurs.
   - The error code history is deleted after you use this function.
2. The Smart Check indicator is lit on the display.
3. Run the Smart Check app on your smart phone.
   - The Smart Check function is optimized for the Galaxy S, Galaxy S2, Galaxy S3, Galaxy S4, iPhone 4, iPhone 5 and iPhone4S.
4. Focus your smart phone's camera on the display panel of the washing machine.
5. If the smart phone's camera is focused on the display panel of the washing machine, the panel and error message is automatically recognized and the error type and countermeasures are displayed on the smart phone.
6. If the smartphone fails to recognize the error code more than twice, please enter the error code displayed on the display panel of the washer manually into the Smart Check app.

Downloading the Smart Check app

- Download the Samsung Laundry App into your mobile phone from the Android market or Apple App store. (Search word : Samsung Smart Washer/Dryer)

Precautions when using Smart Check

F900A_IB_DC68-03133M-05_EN.indd 23 2015/7/28 10:38:52

- If light from a light bulb, fluorescent bulb, or lamp is reflected on the display panel of the washing machine, the smartphone may not be able to recognize the panel or error message easily.
- If you hold the smartphone at too large an angle relative to the front of the display panel, it may not be able to recognize the error code. For best results, hold the smartphone so that the front of the panel and the smartphone are parallel or nearly parallel.

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Press the **Power** button.
2. Open the lid.
3. Load the articles of clothing one at a time loosely into the drum, without overfilling it.
4. Add liquid (or powder) detergent, softener, and/or bleach (if necessary) to the appropriate compartments. See pages 25~27.
5. Close the lid.
6. Use the Cycle Selector to select the appropriate cycle according to the type of material: Normal, Heavy Duty, Water Saving, Towels, Infant Wear, Sanitize, Bedding, Eco Tub Clean, Perm Press, Active Wear, Delicates/Hand Wash, Wool, Quick Wash, Spin, Rinse+Spin. The relevant indicators will illuminate on the control panel.
7. At this time, you can control the wash temperature, the number of rinse cycles, the spinning speed, and the delay time by pressing the appropriate option button.
8. Press the **Start/Pause** button on the Cycle Selector and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

To remove or add laundry items, follow these steps:

1. Press the **Start/Pause** button to unlock the lid.

The lid cannot be opened when the water is too HOT.

2. Remove or add laundry items.
3. Close the lid, and then press the **Start/Pause** button to restart the wash.

If you have Child Lock on, you must deactivate it first. See page 21.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the lid.
2. Remove laundry.

F900A_IB_DC68-03133M-05_EN.indd 24 2015/7/28 10:38:52

FEATURES

Automatic dispenser

Your washer has separate compartments for dispensing detergent and color-safe bleach and fabric softener. Add all laundry additives to their respective compartments before starting your Washer.

The automatic dispenser MUST ALWAYS be in place before you start your washer.

DO NOT open the automatic dispenser when your washer is running.

- Never exceed the manufacturer's recommendations when adding detergent.
- This compartment holds liquid detergent for the main wash cycle, which is added to the load at the beginning of the cycle.
- When using powdered detergent, remove the liquid detergent compartment from the detergent drawer. The washer will not dispense powdered detergent from the liquid detergent compartment.

To add detergent to the automatic dispenser:

1. Open the dispenser drawer.
2. Load the recommended amount of liquid (or powder) detergent into the detergent compartment before you start your wash.
3. Close the drawer slowly and smoothly to avoid spilling, splashing, or premature dispensing of the contents.

It is normal for a small amount of water to remain in the dispenser compartments at the end of the cycle.

Do not put chlorine bleach in the dispenser drawer.

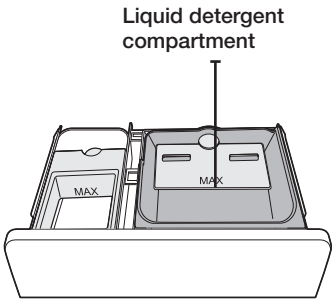

F900A_IB_DC68-03133M-05_EN.indd 25 2015/7/28 10:38:52

washing a load of laundry

Loading the Liquid (or Powder) detergent compartment

1. Pour the recommended amount of laundry detergent directly into the detergent compartment before starting your washer.

2. If you are using color-safe bleach, add it with the detergent to the detergent compartment.

When adding color-safe bleach with detergent, it is best if both laundry products are in the same form – liquid.

When using powdered detergent, remove the liquid detergent compartment from the detergent drawer. The washer will not dispense powdered detergent from the liquid detergent compartment.

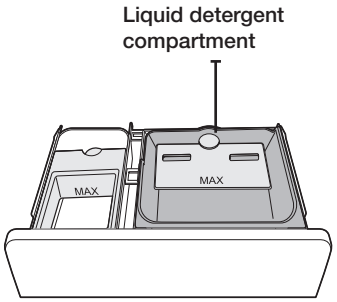

Loading the Bleach compartment

(Liquid chlorine bleach only)

1. Add chlorine bleach to the bleach compartment. DO NOT exceed the MAX FILL line.

- Avoid splashing or over–filling the compartment.
- Your washer automatically dispenses bleach into the tub at the appropriate time.

2. The dispenser automatically dilutes liquid chlorine bleach before it reaches the wash load.

- Never pour undiluted liquid chlorine bleach directly onto the load or into the tub. It is a powerful chemical and can cause fabric damage, such as weakening of the fibers or color loss, if not used properly.
- If you prefer to use color–safe, non–chlorine bleach, add it to the appropriate detergent compartment. DO NOT pour color–safe bleach into the Bleach compartment.

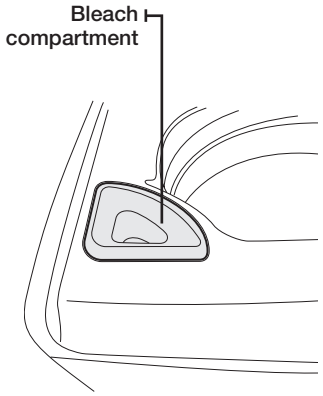

F900A_IB_DC68-03133M-05_EN.indd 26 2015/7/28 10:38:52

Loading the Fabric softener compartment

1. Pour the recommended amount of liquid fabric softener into the softener compartment.
   For smaller loads, use less than one capful.
2. Dilute the fabric softener with water until it reaches MAX FILL in the compartment.
3. The dispenser automatically releases liquid fabric softener at the proper time during the rinse cycle.

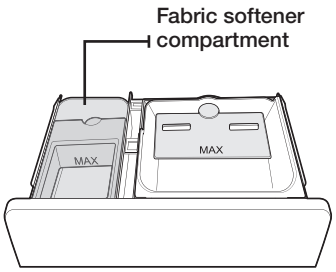

- Use the softener compartment ONLY for liquid fabric softeners.
- DO NOT use the Downy Ball* in the fabric softener compartment with this washer. It will not add fabric softener at the appropriate time.
  Use the detergent compartment.
- Do not use liquid fabric softener that is too sticky as it may not mix with the water sufficiently.

* Brand names are trademarks of their respective manufacturers.

F900A_IB_DC68-03133M-05_EN.indd 27 2015/7/28 10:38:53

maintaining your washer

CLEANING THE EXTERIOR

Turn off the water faucets after finishing the day's washing.

This will shut off the water supply to your washer and prevent the unlikely possibility of damage from escaping water. Leave the lid open to allow the inside of your washer to dry out.

Use a soft cloth to wipe up all detergent, bleach or other spills as they occur.

Clean the following as recommended:

Control Panel – Clean with a soft, damp cloth. Do not use abrasive powders or cleaning pads. Do not spray cleaners directly on the panel.

CLEANING THE INTERIOR

Clean the interior of your washer periodically to remove any dirt, soil, odor, mold, mildew, or bacterial residue that may remain in your washer as a result of washing clothes.

Failure to follow these instructions may result in unpleasant conditions, including odors and/or permanent stains on your washer or laundry.

Hard water deposits may be removed, if needed. Use cleaners labeled "Washer safe".

STORING YOUR WASHER

Washers can be damaged if water is not removed from hoses and internal components before storage. Prepare your washer for storage as follows:

- Select the Quick Wash cycle and add bleach to the automatic dispenser. Run your washer through the cycle without a load.
- Turn the water faucets off and disconnect the inlet hoses.
- Unplug your washer from the electrical outlet and leave your washer lid open to let air circulate inside the drum.
- If your washer has been stored in below–freezing temperatures, allow time for any leftover water in your washer to thaw out before use.

PRESERVING THE TOP COVER AND THE FRONT FRAME

Do not place any heavy or sharp objects or a detergent box on the washing machine. They can scratch or damage the top cover of the unit.

Since the entire washing machine has a high-gloss finish, the surface can be scratched or damaged. Avoid scratching or damaging the surface when using the washing machine.

F900A_IB_DC68-03133M-05_EN.indd 28 2015/7/28 10:38:53

CLEANING THE DISPENSERS

The automatic dispenser may need to be cleaned periodically due to laundry additive buildup.

1. Pull the dispenser drawer straight back until it stops.

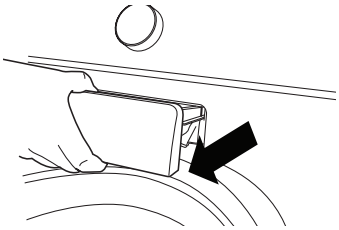

2. Tilt the dispenser drawer upward and remove it.

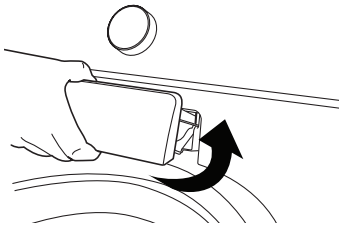

3. Remove the inserts from the 3 compartments. Rinse the inserts and the drawer with warm water to remove traces of accumulated laundry products.

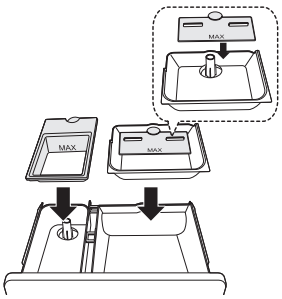

4. To clean the drawer opening, use a small, non-metal brush to clean the recess. Remove all residue from the upper and lower parts of the recess.

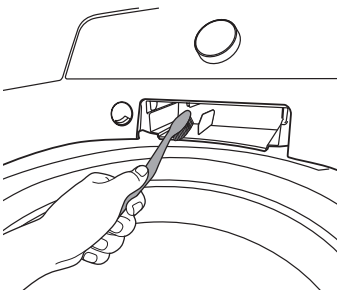

5. Return the inserts to the proper compartments and replace the drawer. By placing the dispenser drawer rail ② on top of the compartment rail ① (Tilt the dispenser drawer downward and insert it.), and then pushing the drawer in firmly and slowly.

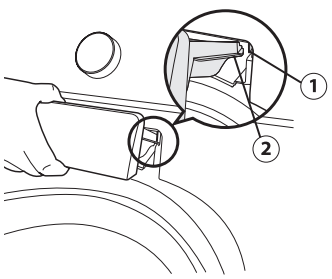

F900A_IB_DC68-03133M-05_EN.indd 29 2015/7/28 10:38:53

maintaining your washer

ECO TUB CLEAN

Eco Tub Clean is a self-cleaning cycle that removes mold that may occur inside the washing machine.

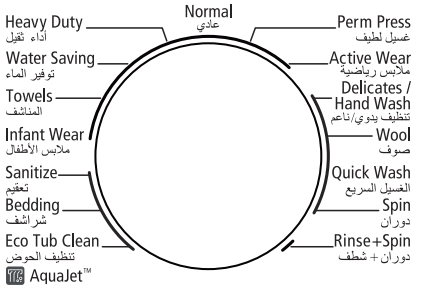

1. Press the **Power** button.
2. Select the **Eco Tub Clean** course.

- Once the Eco Tub Clean course is selected, the only function that can be set is Delay Start.

3. Press the **Start/Pause** button.

- If you press the **Start/Pause** button, Eco Tub Clean begins.

CAUTION

- Using Eco Tub Clean, you can clean the drum without using a cleansing agent.
- Never use Eco Tub Clean when laundry is in the washing machine. This may cause damage to the laundry or a problem with the washing machine.

The Eco Tub Clean Auto Indicator Function

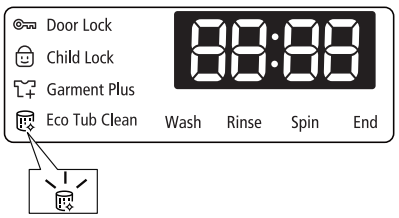

- If the "**Eco Tub Clean**" is lit after a wash, it indicates that tub (drum) cleaning is required. In this case, remove the laundry from the washing machine, turn the power on, and clean the drum by running Eco Tub Clean.
- If you do not run Eco Tub Clean, the "**Eco Tub Clean**" indicator turns off. However, the "**Eco Tub Clean**" indicator will light again after two washes. Not running Eco Tub Clean at this point will not cause a problem with the washing machine.
- Although the Eco Tub Clean Auto Indicator appears once a month or so, the frequency may differ depending on the number of times the washing machine is used.

F900A_IB_DC68-03133M-05_EN.indd 30 2015/7/28 10:38:54

troubleshooting

CHECK THESE SOLUTIONS IF YOUR WASHER...

PROBLEM	SOLUTION
Will not start.	• Make sure the lid is closed. • Make sure your washer is plugged in. • Make sure the water source faucets are open. • Make sure to press the Start/Pause button to start your Washer. • Make sure Child Lock is not activated. See page 21. • Before your washer starts to fill, it will make a series of clicking noises to check the lid lock and do a quick drain. • Check the fuse or reset the circuit breaker
Has no water or not enough water.	• Turn both faucets on fully. • Straighten the water inlet hoses. • Disconnect hoses and clean the screens. Hose filter screens may be clogged.
Has detergent remaining in the automatic dispenser after the wash cycle is complete.	• Make sure your washer is running with sufficient water pressure.
Vibrates or is too noisy.	• Make sure your washer is set on a level surface. If the surface is not level, adjust your washer's feet to level the appliance. • Make sure your washer is not touching any other object. • Make sure the laundry load is balanced.
Stops	• Plug the power cord into a live electrical outlet. • Check the fuse or reset the circuit breaker. • Close the lid and press the Start/Pause button to start your washer. For your safety, your washer will not spin unless the lid is closed. • Before your washer starts to fill, it will make a series of clicking noises to check the lid lock and do a quick drain. • There may be a pause or soak period in the cycle. Wait and it may start. • Check the screens on the inlet hoses at the faucets for obstructions. Clean the screens periodically.

F900A_IB_DC68-03133M-05_EN.indd 31 2015/7/28 10:38:54

troubleshooting

PROBLEM	SOLUTION
Fills with the wrong temperature water.	• Turn both faucets on fully. • Make sure the temperature selection is correct. • Make sure the hoses are connected to the correct faucets. Flush water lines. • Disconnect the hoses and clean the screens. The hose filter screens may be plugged. • As your washer is filling, the water temperature may change as the automatic temperature control feature checks incoming water temperature. This is normal. • While your washer is filling, you may notice just hot and/or just cold water going through the dispenser when you have selected cold or warm wash temperatures. This is a normal function of the automatic temperature control feature as your washer determines the temperature of the water.
Lid locked or will not open.	• Press the Start/Pause button to stop your washer. • It may take a few moments for the lid lock mechanism to disengage.
Does not drain and/or spin.	• Check the fuse or reset the circuit breaker. • Straighten the drain hoses. Eliminate kinked hoses. If there is a drain restriction, call for service. • Close the lid and press the Start/Pause button. For your safety, your washer will not spin unless the lid is closed.
Load is too wet at the end of the cycle.	• Use the High spin speed. • Use high efficiency detergent to reduce over–sudsing. • The Load is too small. Very small loads (one or two items) may become unbalanced and not spin out completely.
Leaks water.	• Make sure all hose connections are tight. • Make sure the end of the drain hose is correctly inserted and secured to the drainage system. • Avoid overloading. • Use high efficiency detergent to prevent over–sudsing.
Has excessive suds.	• Use high efficiency detergent to prevent over-sudsing. • Reduce the detergent amount for soft water, small or lightly soiled loads. • Non-HE detergent is NOT recommended.
Has an odor.	• Check your Detergent . Excessive suds collect in nooks and crannies and cause mold. • Run cleansing cycles to sanitize the machine periodically.(Silver Care or Sanitize Cycle or Eco Tub Clean) • Dry the interior of your washer after the total cycle has finished.

F900A_IB_DC68-03133M-05_EN.indd 32 2015/7/28 10:38:54

INFORMATION CODES

The Washer may display information codes to help you understand what is occurring with your Washer better.

CODE SYMBOL	MEANING	SOLUTION
1E	The Water Level sensor is not working properly. When the washer displays the “1E” code, the washer do draining for 3 minutes. During this time, the Power button is inoperative.	Call for service.
4E	Your Washer has tried to fill but was unsuccessful. Check if the hot water supply hose is connected. When the washer displays the “4E” code, the washer do draining for 3 minutes. During this time, the Power button is inoperative.	Make sure the water faucets are open all the way. Check for kinked hoses. Check the inlet screens on the fill hoses. If you use a Flood Safety Device, then please remove the device and connect the water hoses directly to the unit. You must connect the hot water supply hose because hot water is supplied by the Auto Temperature Control (A.T.C.) function.
5E	Your washer is not draining. It can also mean that the unit senses a small clog while draining.	Do the following: 1) Turn off the unit and turn it on again. 2) Select only the Spin Cycle. 3) Press the Start/Pause to drain the water. If it still does not drain, call for service.
LE	Your Washer has tried to fill but has not reached the proper water level. When the washer displays the “LE” code, the washer do draining for 3 minutes. During this time, the Power button is inoperative.	Call for service.
UE	Unbalanced load prevented your Washer from spinning.	Redistribute the load, press the Start/Pause button.
dE	Lid is open when washer is running.	Close the lid tightly and restart the cycle. If the code reappears, call for service.
dE1	The lid switch is not working properly.	Turn the power on again after 2~3 minutes and restart from the beginning. If the problem continues, call for service.
E2	Jammed Key.	Call for service
3E	Motor not running properly.	Restart the cycle pressing the Start/Pause button. If the code reappears, call for service.

F900A_IB_DC68-03133M-05_EN.indd 33 2015/7/28 10:38:55

troubleshooting

CODE SYMBOL	MEANING	SOLUTION
AE	Communication error between SUB PBA and MAIN PBA	Call for service.
8E 8E2	Mems sensor problem.	Call for service.
tE	Temperature sensor problem.	Restart the cycle. If the code reappears, call for service.
OE	A fault is detected in the water level sensor.	Call for service
4E2	This occurs when the temperature exceeds 50, for over 8 seconds in the Wool and Delicates course.	Call for service
PE	When position of the clutch can't be detected.	Call for service
PE1	After position of the clutch is detected, if the signal of the clutch hall goes wrong, occurs error.	Call for service

For any codes not listed above, call 8002474357.

F900A_IB_DC68-03133M-05_EN.indd 34 2015/7/28 10:38:56

FABRIC CARE CHART

The following symbols provide garment care direction. The Clothing care labels include symbols for washing, bleaching, drying and ironing, or dry cleaning when necessary. The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow care label directions to maximize garment life and reduce laundering problems.

Wash Cycle		**Special Instructions**		**Warning Symbols for Laundering**	
	Normal		Line Dry/ Hang to Dry		Do Not Wash
	Permanent Press / Wrinkle Resistant / Wrinkle Control		Drip Dry		Do Not Wring
	Gentle/Delicates		Dry Flat		Do Not Bleach
	Hand Wash	**Heat Setting**			Do Not Tumble Dry
Water Temperature**			High		No Steam (added to iron)
●●●	Hot		Medium		Do Not Iron
●●	Warm		Low	**Dryclean**	
●	Cold		Any Heat		Dry Clean
Bleach			No Heat/Air		Do Not Dry Clean
	Any Bleach (when needed)	**Iron-Dry or Steam Temperatures**			Line Dry/ Hang to Dry
	Only Non-Chlorine (color-safe) Bleach (when needed)		High		Drip Dry
	Tumble Dry Cycle		Medium		Dry Flat
Normal			Low		
	Permanent Press/ Wrinkle Resistant/ Wrinkle Control				
	Gentle/ Delicates				

** The dot symbols represent appropriate wash water temperatures for various items. The temperature range for Hot is 105° - 125 °F / 41° - 52 °C, for Warm 85° - 105 °F / 29° - 41 °C and for Cold 60° - 85 °F / 16° - 29 °C. (Wash water temperature must be a minimum of 60 °F / 16 °C for detergent activation and effective cleaning.) The clothes washer can not ensure these temperatures because the actual temperature of the water entering your washer depends on water heater settings and regional water supply temperatures. For example, cold water entering the home in the northern states during winter may be 40 °F / 4 °C which is too cold for effective cleaning. In this situation, you will need to adjust the water temperature by selecting a warm setting, adding some hot water to the MAX FILL line, or using your Washer's heating option, if available.

F900A_IB_DC68-03133M-05_EN.indd 35 2015/7/28 10:38:56

appendix

CYCLE CHART

Use this chart to set the best cycle and options for you laundry.

(●: factory setting, ●: selectable)

Course	Functions										
	Water Level	Temp.					Spin				
		EH	H	W	EW	C	EH	H	M	L	NS
Normal	1~5			●	●	●	●	●	●	●	●
Heavy Duty	1~5		●	●	●	●	●	●	●	●	●
Water Saving	1~5		●	●	●	●	●	●	●		●
Towels	1~5		●	●	●	●	●	●	●	●	●
Infant Wear	1~5		●	●	●	●	●	●	●	●	●
Sanitize	1~5	●					●	●	●	●	●
Bedding	1~5		●	●	●	●		●	●	●	●
Eco Tub Clean	4		●						●		
Perm Press	1~5		●	●	●	●	●	●	●	●	●
Active Wear	1~5			●	●	●		●	●	●	●
Delicates/Hand Wash	1~5			●	●	●			●	●	●
Wool	1~5			●	●	●				●	●
Quick Wash	1~5		●	●	●	●	●	●	●	●	●
Spin	-						●	●	●	●	●
Rinse+Spin	1~5					●	●	●	●	●	●

Course	Options							
	AquaJet™ Deep Clean	AquaJet™ Delicate Wash	Eco Plus	My Cycle	Delay Start	Power Wash	Extra Rinse	Pre Soak
Normal	●		●	●	●	●	●	●
Heavy Duty	●		●	●	●	●	●	●
Water Saving	●		●	●	●	●	●	●
Towels	●		●	●	●	●	●	●
Infant Wear	●		●	●	●	●	●	●
Sanitize				●	●	●	●	●
Bedding			●	●	●	●	●	●
Eco Tub Clean					●			
Perm Press	●		●	●	●	●	●	●
Active Wear	●		●	●	●		●	●
Delicates/Hand Wash		●		●	●		●	
Wool				●	●		●	
Quick Wash				●	●	●	●	
Spin				●	●			
Rinse+Spin	●			●	●		●	

Temp.	Spin	Water Level
EH: Extra Hot	**EH:** Extra High	**5**
H: Hot	**H:** High	**4**
W: Warm	**M:** Medium	**3**
EW: Eco Warm	**L:** Low	**2**
C : Cold	**NS:** No Spin	**1**

F900A_IB_DC68-03133M-05_EN.indd 36 2015/7/28 10:38:56

HELPING THE ENVIRONMENT

- Your washer is manufactured from recyclable materials. If you decide to dispose of it, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the lid so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufacturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

SPECIFICATION

TYPE	TOP LOADING WASHER	
DIMENSIONS	Div	Inches (cm)
	A. Height	44.7" (113.5)
	B. Width	27.0" (68.6)
	C. Height with lid open	58.1" (147.6)
	D. Depth	29.3" (74.4)

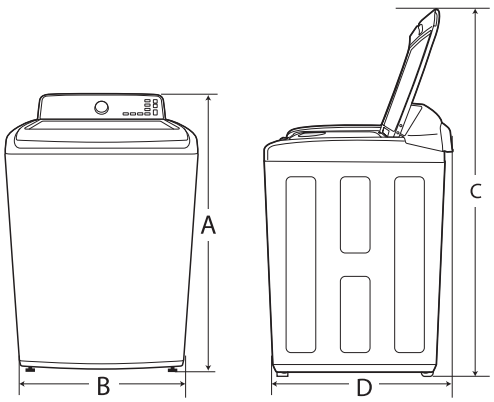

F900A_IB_DC68-03133M-05_EN.indd 37 2015/7/28 10:38:56

appendix

The manufacturer's name and/or his trademark		SAMSUNG			
Country of origin		Made in China			
The type number		WA20F9A8D**			
Kind of washing machine		Automatic electric Washing machine			
Washing system		Washing machine with vortex system			
Rated voltage (volts)		230 V~			
Rated frequency (Hz)		60 Hz			
Rated power input (watt or kW)	**Rated power input**	1700 W			
	Main motor	500 W			
	Pump motor	80 W			
	Wash heater	1500 W			
Water level		Ex.H	H	M	L
Washing capacity		20 kg	12 kg	8 kg	4 kg
Quantity of water		140 L	120 L	65 L	55 L
Washing machine class		Class I			
IP number		IPX4			
The maximum permissible inlet water pressure		800 kPa			
The minimum permissible inlet water pressure		137 kPa			
Standard quantity of used water (litre)		275L			
Net weight		66 kg			
Spin revolutions		1100 rpm			

- The washing machine shall not be installed at a humid place.
- The wringer must be switched off when not in use.
- The washing machine must not be operated by children.
- The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.
- The hands shall not be inserted into running water extracting tub.
- The washing machine whose lid can be opened during water extraction, that if it takes 15 s or more for complete stop of water-extracting chamber tub such a case should be understood as a trouble.

F900A_IB_DC68-03133M-05_EN.indd 38 2015/7/28 10:38:56

F900A_IB_DC68-03133M-05_EN.indd 39 2015/7/28 10:38:56

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
SAUDI ARABIA	8002474357	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)

Code No. DC68-03133M-05_EN

WA20F9A8D*

غسالة كهربية أوتوماتيكية

دليل المستخدم

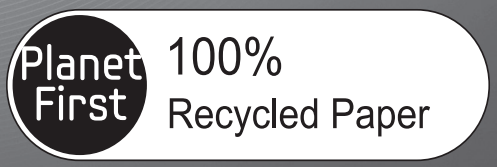

تم إنتاج هذا الدليل باستخدام ورق مُعاد تدويره بنسبة ١٠٠٪.

إمكانيات هائلة

نشكرك على شراء هذا المنتج من Samsung.

DC68-03133M-03

أهم المزايا التي تتميز بها الغسالة الجديدة

١. سعة كبيرة
الحصول على كمية كبيرة من الملابس والبطانيات بنظافة فائقة. تقدم الغسالة سامسوخ ذات السعة الكبيرة المساحة الكافية لاستيعاب الملابس التي تحتاج إلى غسيل أكثر نقاوة ونظافة.

٢. AquaJet™
تقوم غسالة AquaJet™بمهمة الغسيل بلطف وبفعالية أكبر من الغسالات ذات السعات الكبرى التقليدية. تسمح رشات المياه بتوزيع المسحوق بالتساوي ويعمل على تخلله داخل الملابس بشكلٍ أسرع وأعمق. وعلاوة علي ذلك فإنها توفر نظافة أفضل مع عناية متقدمة بالأقمشة.

٣. موتور المحول العكسي الرقمي
قوة تتعامل مع أي شيء! يقدّم موتور المحوّل العكسي ذو الدفع المباشر الطاقة مباشرة إلى حوض الغسالة من السرعة المتغيرة. موتور المحول القابل للانعكاس. يولد الموتور ذو الدفع المباشر الذي يعمل بدون سيور سرعة دوران عالية للحصول على تشغيل أكثر فعالية وهدوءَ. يوجد كذلك بالغسالة بعض الأجزاء المتحركة فقط، بما يعني إجراء إصلاحات قليلة.

٤. Mist Shower (مغسلة الرذاذ)
تعمل الفوهة المستقلة برش الماء بشكل متساوي في كل أجزاء الحوض حتى تصبح دورة الشطف فعالة حتى في حالة وجود كمية صغيرة من الماء.

٥. VRT ® (تكنولوجيا تقليل الاهتزازات)
تقوم غسالة الملابس سامسوخ بتنفيذ وظائفها بهدوء شديد في أقصي سرعاتها بما يقلل مستويات الاهتزاز والضوضاء إلى أدنى مستوى.

٦. Eco Plus (توفير زائد)
إذا قمت باختيار هذا الخيار، فسيتم ضبط درجة حرارة الماء على درجة حرارة أقل قليلاً أثناء دورة الغسيل العادية لتوفير الطاقة.

٧. Eco Tub Clean (تنظيف الحوض)
تنظيف حلة غسالتك بواسطة زر واحد! Eco Tub Clean (تنظيف الحوض) هي ميزة مصممة خصيصاً لإزالة بقايا مادة التنظيف والأوساخ المتراكمة في الحوض، بدون الحاجة إلى أي مواد منظفة كمياوية خاصة.

٨. My Cycle (الدورة المفضلة)
هي وظيفة فعالة وملائمة تتيح لك حفظ دورة الغسيل التي يتم استخدامها بشكل متكرر. بعد أن يتم ضبط هذه الوظيفة، يمكنك القيام بالغسيل ببساطة عن طريق الضغط على أزرار Power (الطاقة)، My Cycle (الدورة المفضلة)، Start (تشغيل) بالتسلسل.

٩. Smart Check (الفحص الذكي)
Samsung's Smart Check هو نظام مراقبة الأخطاء أوتوماتيكياً ويعمل هذا النظام على الكشف عن المشكلات وتشخيصها في مرحلة مبكرة وتقديم حلولاً سريعة وسهلة.

١٠. Sanitize (تعقيم)
عند اختيار دورة التعقيم المعتمدة من قبل NSF، يجري تسخين الماء إلي درجة حرارة عالي إضافي بما يقضى علي ٩٩,٩٪ من البكتريا التي يغلب وجودها في الملابس والشراسف والمناشف. ولقد جري الحصول علي اعتماد NSF الدولي وهي منظمة متخصصة في مجال الاختبار والاعتماد.

يرجي التحقق من ملصق العناية بالملابس لتجنب وتفادي تلف الملابس. إن دورة التعقيم هي الدورة الوحيدة التي جري تصميمها بحيث تلبي متطلبات برتوكول كفاءة التعقيم.

F900A_IB_DC68-03133M-05_AR.indd 2 2015/7/28 10:46:44

معلومات السلامة

تهانينا على شرائك غسالة Samsung الجديدة. يحتوى هذا الدليل على معلومات هامة حول عملية تركيب الجهاز واستخدامه ورعايته. يرجى قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة لغسالتك.

ما يجب أن تعرفه حول إرشادات السلامة

لا تغطي التحذيرات والتنبيهات وإرشادات السلامة الهامة التالية كافة الظروف والمواقف المحتمل التعرض لها. لذا يجب التعامل بحذر وانتباه وعناية عند تركيب الغسالة وصيانتها وتشغيلها.

الرموز والاحتياطات الهامة للسلامة

تشير الرموز والعلامات الموجودة في دليل المستخدم هذا إلى ما يلي:

تحذير	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى **إصابات جسدية بالغة أو الوفاة**. لتقليل خطر حدوث حريق أو انفجار أو صدمة كهربائية أو إصابة جسدية عند استخدام الغسالة، اتبع احتياطات السلامة الأساسية التالية:
تنبيه	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى **إصابات طفيفة للأفراد أو تلف في الممتلكات**.

	ممنوع.
	ممنوع الفك.
	ممنوع اللمس.
	اتبع الإرشادات كما هي.
	قم بفصل موصل الطاقة من مقبس الحائط.
	تأكد من توصيل الغسالة بمأخذ أرضي لمنع حدوث صدمة كهربائية.
	اتصل بمركز الخدمة للحصول على المساعدة.
	ملاحظة

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.

لذا الرجاء اتباعها بعناية.

بعد الاطلاع على هذا الدليل، قم بحفظه في مكان آمن للاستناد إليه كمرجع في المستقبل.

اقرأ كافة الإرشادات أولاً قبل استخدام الجهاز.

F900A_IB_DC68-03133M-05_AR.indd 3 2015/7/28 10:46:44

معلومات السلامة

تحذير

تحذير: لتقليل إمكانية نشوب حريق أو صعقة كهربائية أو إصابة للأشخاص أثناء استخدام الغسالة، قم باتباع احتياطات الأمان الأساسية بما في ذلك ما يلي:

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون فوق الغسالة أو بداخلها. حيث لا يمكن فتح باب الغسالة بسهولة من الداخل، وقد يصاب الأطفال بإصابات بالغة في حالة احتباسهم بداخلها.

لم يتم تصميم هذا الجهاز للاستخدام من قِبل أشخاص لديهم مشكلات جسدية وعقلية وحسية (بما فيهم الأطفال) أو نقص في المعرفة أو الخبرة، إلا تحت إشراف أو تعليمات بخصوص استخدامه من قِبل الشخص المسؤول عن سلامتهم.

يجب مراقبة الأطفال لضمان عدم عبثهم بالغسالة.

بالنسبة للاستخدام في أوروبا: يمكن استخدام هذا الجهاز بواسطة الأطفال الذين يبلغون من العمر ٨ سنوات أو أكبر وكذلك بواسطة الأشخاص الذين يعانون من قصور جسدي أو حسي أو عقلي أو نقص الخبرة والمعرفة بشرط خضوعهم للإشراف وتوعيتهم بالإرشادات الخاصة باستخدام الجهاز بطريقة آمنة وأن يتفهموا المخاطر الكامنة. يجب منع الأطفال من اللعب بالجهاز. ويجب ألا يقوم الأطفال بعملية التنظيف أو أعمال الصيانة التي يمكن للمستخدم القيام بها بدون إشراف.

في حالة تلف كابل الجهاز (سلك التيار الكهربائي)، يجب تغييره من قِبل الشركة المصنّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتفادي التعرض لأي خطر.

يجب وضع الجهاز بالقرب من مأخذ التيار الكهربائي، وصنابير توريد الماء وخراطيم تصريف الماء بحيث يسهل الوصول إليها.

F900A_IB_DC68-03133M-05_AR.indd 4 2015/7/28 10:46:44

تحذيرات هامة خاصة بالتركيب

تحذير

قم بوضع كابل الطاقة في مقبس تيار كهربائي متناوب ٢٣٠ فولت / ٦٠ هرتز بقدرة ١٥ أمبير أو أعلى. استخدم المقبس لهذا الجهاز فقط. كما يجب عدم استخدام كبل تمديد.

- قد يؤدي مشاركة مقبس الحائط مع أجهزة أخرى باستخدام سلك طاقة أو مد سلك الطاقة إلى حدوث صدمة كهربائية أو حريق.
- لا تستخدم محول كهربي. قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.
- تأكد من أن الجهد الكهربي للطاقة والتردد والتيار مطابقة للقياسات الخاصة بمواصفات المنتج. يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

أترك أمر تركيب هذا الجهاز من قبل فني مؤهل أو شركة صيانة مؤهلة.

- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربائية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

قم بإزالة أي مواد خارجية مثل الأتربة أو الماء من النهايات الطرفية لسلك الطاقة ونقاط الاتصال باستخدام قطعة قماش جافة بشكل منتظم.

- قم بإلغاء توصيل سلك الطاقة وتنظيفه باستخدام قطعة قماش جافة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

قم بتوصيل سلك الطاقة في مقبس الحائط في الاتجاه الصحيح بحيث يكون اتجاه السلك نحو الأرضية.

- إذا قمت بتوصيل سلك الطاقة في المقبس في الاتجاه المعاكس. فقد تتلف الأسلاك الكهربائية الموجودة داخل الكبل وقد يؤدي هذا الأمر إلى حدوث صدمة كهربية أو حريق.

يجب بتثبيت هذا الجهاز على الأرض بشكل سليم.
لا تقم بتثبيت الجهاز على الأرض بجانب أنبوب غاز أو أنبوب ماء بلاستيكي أو خط تليفون.

- التأريض غير الملائم قد يؤدي إلى حدوث صعقة كهربائية، أو نشوب حريق، أو انفجار، أو حدوث مشكلات بالمنتج.
- لا تقم مطلقاً بتوصيل كابل الطاقة في المقبس غير المؤرض بطريقة صحيحة. تأكد من أن المقبس الذي تستخدمه مؤرض طبقاً للقوانين المحلية والوطنية.

يجب عدم تركيب هذا الجهاز بالقرب من سخان أو مواد قابلة للاشتعال.
يجب عدم تركيب هذا الجهاز في بيئة رطبة أو موقع به زيت أو أتربة أو في مكان يتعرض لضوء الشمس المباشر والماء (قطرات المطر).
يجب عدم تركيب هذا الجهاز في موقع يكون به تسرب للغاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

لذا، تأكد من توصيل سلك الطاقة في مقبس الحائط بإحكام. لا تستخدم سلك طاقة تالف أو كبل طاقة تالف أو مقبس حائط غير محكم.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

يجب عدم جذب سلك الطاقة أو ثنيه بقوة.
يجب عدم لف سلك الطاقة أو طيه.
يجب عدم تعليق سلك الطاقة فوق كائن معدني أو وضع كائن ثقيل فوق سلك الطاقة أو إدراج كائنات بين سلك الطاقة أو دفع سلك الطاقة في المساحة الموجودة خلف الجهاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

يجب عدم جذب سلك الطاقة، أثناء عدم توصيل موصل الطاقة.

- قم بفصل موصل الطاقة عن طريق الإمساك بالموصل.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

في حالة قابس الطاقة أو سلك الطاقة، فاتصل بأقرب مركز صيانة إليك.

F900A_IB_DC68-03133M-05_AR.indd 5 2015/7/28 10:46:44

معلومات السلامة

تنبيهات خاصة بالتركيب

تنبيه

الرجاء وضع هذا الجهاز بحيث يمكن الوصول إلى كابل الطاقة بسهولة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق نتيجة لتسريب الكهرباء.

يجب تركيب جهازك على أرضية مستوية وصلبة تتحمل وزن الجهاز.
- عدم الالتزام بفعل ذلك قد يؤدي إلى حدوث اهتزازات، أو ضوضاء أو مشكلات غير اعتيادية مع المنتج.

قم بنزع قابس الطاقة في حال عدم استخدام الجهاز لفترات زمنية طويلة أو أثناء الرعد/ العاصفة البرقية.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

تحذيرات هامة خاصة بالاستخدام

تحذير

في حال تعرض الجهاز للغمر، فقم على الفور بقطع إمداد الطاقة والاتصال بأقرب مركز خدمة لديك.
في حالة إصدار الجهاز لضوضاء غير طبيعية، أو رائحة اشتعال أو دخان، قم بإلغاء توصيل سلك الطاقة فورًا واتصل بأقرب مركز للصيانة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

في حال حدوث تسرب غاز (كغاز البروبان، والغاز النفطي المسال، وما شابه ذلك)، فقم بتهوية المنطقة فوراً. لا تقم بإيقاف تشغيل أي جهاز أو إضاءة أو إطفاء المصباح.
- لا تستخدم مروحة تهوية.
- قد ينتج عن الشرارة حدوث صدمة كهربية أو حريق.

يجب عدم غسل العناصر العالق بها الجاز أو الكيروسين أو البنزين أو تنر الطلاء أو الكحول أو أي مواد أخرى قابلة للاشتعال أو الانفجار.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق أو انفجار.
لا تفتح غطاء الغسالة بالقوة أثناء تشغيلها (غسيل على درجة حرارة عالية/تجفيف/ دوران).
- قد ينتج عن اندفاع الماء خارج الغسالة حدوث الإصابة بالحروق أو التسبب في أن تصبح الأرض منزلقة.
قد ينتج عن هذا الأمر إصابات شخصية.
- فتح الغطاء بقوة قد يؤدي إلى تلف المنتج أو حدوث إصابة.

تأكد من إزالة الغلاف (الإسفنج، الفوم) المرفق بأسفل الغسالة قبل الاستخدام.

يجب عدم وضع يديك تحت الغسالة.
- قد ينتج عن هذا الأمر إصابات شخصية.

F900A_IB_DC68-03133M-05_AR.indd 6 2015/7/28 10:46:44

لا تلمس سلك التيار الكهربي بيدين مبتلتين.

- قد ينتج عن هذا الأمر وجود صدمة كهربية.

لا تقم بإيقاف تشغيل الجهاز عن طريق نزع قابس الطاقة عندما تكون الغسالة قيد التشغيل.

- قد يؤدي توصيل سلك الطاقة مرة أخرى بالمقبس إلى حدوث شرارة ينتج عنها صدمة كهربية أو حريق.

احتفظ بجميع مواد التغليف بعيدًا عن متناول الأطفال، حيث إن مواد التغليف قد تمثل خطورة على الأطفال.

- قد يؤدي وضع الطفل لكيس فوق رأسه إلى إصابته بالاختناق.

يجب عدم السماح للأطفال أو الأفراد غير المؤهلين باستخدام هذه الغسالة بدون إشراف.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حروق أو إصابة.

لا تضع يديك أو أي كائن معدني أسفل الغسالة أثناء تشغيلها.

- قد ينتج عن هذا الأمر إصابات شخصية.

لا تحاول إصلاح الجهاز أو فكه أو تعديله بنفسك.

- يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني وما إلى ذلك) خلاف المنصهر القياسي.
- إذا كنت تحتاج إلى إصلاح أو إعادة تركيب الجهاز، فاتصل بأقرب مركز خدمة لديك.
- قد ينتج عن الفشل في اتباع هذه التعليمات وجود صدمة كهربائية أو حريق أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

في حالة دخول أي أشياء غريبة كدخول الماء للجهاز في أي منطقة بخلاف الحوض، فقم بنزع قابس الطاقة والاتصال بأقرب مركز خدمة لديك.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

عندما يصبح خرطوم التزوّد بالماء غير محكم وينتج عنه تسريب للماء في الجهاز، يجب فصل سلك الطاقة من مأخذ الكهرباء.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

تنبيه تنبيهات خاصة بالاستخدام

عندما يعلق بالغسالة مادة غريبة مثل المنظفات أو الأتربة أو مخلفات الطعام وما إلى ذلك، قم بإلغاء توصيل سلك الطاقة وتنظيف الغسالة باستخدام قطعة قماش مبللة وناعمة.

- يؤدي الفشل في الالتزام بهذا الأمر إلى وجود تغيير في الألوان أو التشويه أو التلف أو الصدأ.
  يمكن كسر القسم الشفاف بالغطاء عند التعرض لصدمة قوية. يجب الحرص عند استخدام الغسالة.
- إذا كان القسم الشفاف مشقوقاً أو مكسوراً، فقد يؤدي هذا إلى حدوث إصابة.

عند حدوث فشل في توريد الماء أو عند إعادة توصيل خرطوم توريد الماء، يجب فتح الصنبور ببطء
يجب فتح الصنبور ببطء في حالة عدم الاستخدام لفترة طويلة.

- قد يؤدي وجود ضغط الهواء في خرطوم توريد الماء أو أنبوب الماء إلى تلف جزء من الغسالة أو وجود تسريب للماء.

في حالة حدوث خطأ يتعلق بالتصريف أثناء التشغيل، تحقق من وجود مشكلة تتعلق بالتصريف.

- في حالة استخدام الغسالة أثناء وجود تسريب للماء بها نتيجة لوجود مشكلة تتعلق بالتصريف، قد يؤدي ذلك إلى وجود صدمة كهربية أو حريق نتيجة للتسريب الكهربي.

يجب عدم وضع يديك تحت الغسالة.

- قد ينتج عن هذا الأمر إصابات شخصية.

F900A_IB_DC68-03133M-05_AR.indd 7 2015/7/28 10:46:44

معلومات السلامة

يجب إدخال غسيل في الغسالة بالكامل بحيث لا يتم تعلق الغسيل بالباب.

- في حالة تعرض الغسيل للانحشار في الغطاء، فقد يؤدي ذلك إلى تلف الغسيل أو الغسالة، أو قد يؤدي إلى تسرب الماء.

تأكد من إيقاف تشغيل الصنبور في حالة عدم استخدام الغسالة.

- تأكد من إحكام توصيل موصلات خرطوم إمداد الماء بطريقة صحيحة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى تلف الجهاز أو الإصابة.

يجب فتح الصنبور والتحقق من إحكام موصل خرطوم الماء وعدم وجود تسريب للماء قبل استخدام المنتج.

- إذا كانت وصلات خرطوم إمداد الماء غير محكمة الربط، فقد يؤدي ذلك إلى تسرب الماء.

يجب عدم الوقوف فوق الجهاز أو وضع أشياء فوقه (مثل الغسيل أو الشمعدان المشتعل أو السجائر المشتعلة أو الأطباق أو المواد الكيماوية أو الكائنات المعدنية وما إلى ذلك).

- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو حريق أو مشاكل تتعلق بالمنتج أو الإصابة.

لا تقم بتشغيل الجهاز ويديك مبللة بالماء.

- قد ينتج عن هذا الأمر وجود صدمة كهربية.

يجب عدم رش مواد متطايرة مثل المبيدات الحشرية فوق سطح الجهاز.

- فبالإضافة إلى أن هذا الأمر يضر بالإنسان، فقد ينتج عنه أيضًا وجود صدمة كهربائية أو حريق أو مشاكل تتعلق بالمنتج.

لا تضع كائناً ينتج عنه وجود مجال كهرومغناطيسي بالقرب من الغسالة.

- قد ينتج عن هذا الأمر إصابات شخصية نتيجة وجود خطأ يتعلق بالتشغيل.

يجب عدم لمس الماء حيث إن الماء الذي يتم تصريفه أثناء الغسل في درجات حرارة عالية أو أثناء دورة التنشيف يكون ساخنًا.

- قد ينتج عن هذا الأمر وجود حروق أو إصابات شخصية.

لا تقم بإجراء دورة الغسيل أو الدوران أو التجفيف للمقاعد أو المفارش أو الملابس المقاومة للماء.*

- يجب عدم غسل السجاد السميك أو الصلب حتى في حالة وجود علامة الغسالة على علامة العناية.
  قد يؤدي هذا إلى حدوث إصابة أو تلف الغسالة، أو الجدران أو الأرضية أو الملابس بسبب الاهتزازات غير الاعتيادية.

* أشياء يجب عدم غسلها: المفروشات الصوفية أو أغطية الأمطار أو سترات الصيد أو بنطال التزلج أو حقائب النوم أو الحفاضات وأغطية الدراجات والدراجات البخارية والسيارات وما إلى ذلك.

لا تقم بتشغيل الغسالة عندما تكون وحدة توزيع المادة المنظفة غير مركبة.

- قد ينتج عن هذا الأمر وجود صدمة كهربية أو إصابة نتيجة لتسريب الماء.

لا تقم بإدخال يديك في وحدة توزيع المادة المنظفة بعد فتحها.

- هذا قد يؤدي إلى الإصابة عند انحشار يديك.

F900A_IB_DC68-03133M-05_AR.indd 8 2015/7/28 10:46:44

لا تضع أي أشياء غير قابلة للغسل كالأحذية أو بقايا الطعام أو الحيوانات في الغسالة.

- قد يؤدي هذا إلى حدوث اهتزازات غير عادية بما قد يتلف الغسالة. وفي حالة وجود حيوانات أليفة بها. فقد يتسبب ذلك في الإصابة البالغة أو الموت.

يجب عدم الضغط على الأزرار باستخدام كائنات حادة مثل المسامير أو السكاكين أو الأظافر وما إلى ذلك.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو إصابة.

يُحظر غسل الملابس التي تحتوي على زيوت أو كريمات أو مستحضرات. والتي تكون في الغالب موجودة في المستحضرات الجلدية أو عيادات التدليك.

- قد ينتج عن هذا الأمر تشوه الحاجز المطاطي وتسريب الماء.

لا تترك الأشياء المعدنية (مسامير الأمان. دبابيس الشعر. ما شابه ذلك. أو مادة التبييض في الحوض لفترة زمنية طويلة.

- قد يؤدي هذا الأمر إلى صدأ الحوض.
- في حالة ظهور الصدأ على سطح الحوض. قم بوضع مادة تنظيف مطهرة معتدلة على السطح واستخدم الإسفنجة لتنظيفه. يجب عدم استخدام فرشاة معدنية نهائياً.

يجب عدم استخدام سائل التنظيف بشكل مباشر. كما يجب عدم غسل الغسيل أو شطفه أو تنشيفه إذا كان يتضمن مسحوق للتنظيف الجاف.

- قد يؤدي هذا الأمر إلى وجود اشتعال فوري نتيجة للحرارة الناتجة عن تأكسد الزيت.

يجب عدم استخدام الماء القادم من أجهزة تبريد/تسخين الماء.

- قد ينتج عن هذا الأمر حدوث مشاكل في الغسالة.

يجب عدم استخدام صابون غسل اليدين الطبيعي مع الغسالة.

- إذا حدث تصلب لهذا الصابوتن وتراكم بداخل الغسالة. فقد يؤدي ذلك إلى حدوث مشكلات مع المنتج.أو حدوث تشوه باللون أو تكون الصدأ أو الروائح الكريهة.

يجب عدم غسل أنواع من الغسيل من المفروشات في شبكة الغسيل.

- يؤدي الفشل في الالتزام بهذا الأمر إلى وجود إصابة نتيجة للاهتزازات غير الطبيعية.
- قم بوضع الأشياء الصغيرة مثل الجوارب وملابس النساء التحتية في شبكة الغسيل.

لا تستخدم مسحوق غسيل صلب.

- فقد يحدث تسريب للماء في حالة تراكمه داخل الغسالة.

لا تقم بغسيل السجاد المبتلي أو ممسحات الأرجل.

- إذا قمت بغسيل السجاد المبتلي أو ممسحات الأرجل. فسوف يتراكم الرمال بداخل الغسالة. فقد يؤدي إلى حدوث خطأ كعدم التصريف.

تعليمات التنظيف الهامة

تحذير

يجب عدم تنظيف الجهاز عن طريق رش الماء فوق الجهاز مباشرةً.

لا تقم باستخدام منظف يحتوي على حمض قوي.

يجب عدم استخدام البنزين أو التمر أو الكحول لتنظيف الجهاز.

- قد ينتج عن هذا الأمر وجود تغيير في اللون أو تشويه أو صدمة كهربية أو حريق.

قم بفصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

F900A_IB_DC68-03133M-05_AR.indd 9 2015/7/28 10:46:44

المحتويات

تركيب الغسالة ١١

١١ إخراج الغسالة من عبوتها
١١ نظرة عامة على الغسالة
١٢ متطلبات الموقع الأساسية
١٢ المتطلبات الكهربية
١٢ التوصيل الأرضي
١٢ متطلبات المياه
١٣ أداة التصريف
١٣ سطح الأرضية
١٣ الاعتبارات الخاصة بالموقع
١٣ تركيب القنطرة أو الخزانة
١٤ الأبعاد المطلوبة للتركيب
١٤ ملاحظة هامة لجهة التركيب
١٤ الشكل التوضيحي المتبع لعملية التركيب

تعليمات التشغيل ١٨

١٨ وضع الملابس بالغسالة
١٨ بدء التشغيل

غسل الملابس ١٩

١٩ نظرة عامة على لوحة التحكم
٢١ Child Lock (قفل الأطفال) [ ]
٢٢ Signal (المؤشر)
٢٢ Garment Plus (الملابس+)
٢٢ My Cycle (الدورة المفضلة)
٢٢ Delay Start (بدء متأخر)
٢٣ Pre Soak (قبل النقع)
٢٣ ™AquaJet
٢٣ Eco Plus (توفير زائد)
٢٣ Mist Shower (مغسلة الرذاذ)
٢٣ Smart Check (الفحص الذكي)
٢٤ غسل الملابس باستخدام قرص تحديد الدورة
٢٥ الميزات

صيانة الغسالة ٢٨

٢٨ تنظيف الأسطح الخارجية
٢٨ تنظيف الجزء الداخلي
٢٨ تخزين الغسالة
٢٨ الحفاظ على الغطاء العلوي والإطار الأمامي
٢٩ تنظيف وحدات التوزيع
٣٠ Eco Tub Clean (تنظيف الحوض)

استكشاف الأخطاء وإصلاحها ٣١

٣١ تحقق من هذه الحلول إذا كانت غسالتك...
٣٣ رموز المعلومات

الملحق ٣٥

٣٥ جدول العناية بالأقمشة
٣٦ جدول الدورات
٣٧ حماية البيئة
٣٧ المواصفات

F900A_IB_DC68-03133M-05_AR.indd 10 2015/7/28 10:46:44

تركيب الغسالة

إخراج الغسالة من عبوتها

قم بإخراج الغسالة من عبوتها وافحصها للتحري عن أي تلف وقع بها أثناء الشحن. تأكد من استلامك كل الأشياء الموضحة أدناه. إذا تلفت غسالتك أثناء الشحن، أو لم تستلم كل الأشياء، فالرجاء الاتصال على الرقم9200-21230 .

لمنع حدوث إصابة شخصية أو إجهاد، الرجاء ارتداء قفازات واقية عند رفع الوحدة أو حملها.

⚠ تحذير قد تصبح مواد التغليف من الأشياء الخطيرة بالنسبة للأطفال. الرجاء الاحتفاظ بكل مواد التغليف (الأكياس البلاستيكية، البوليسترين، ما شابه ذلك) بعيداً عن أيدي الأطفال.

نظرة عامة على الغسالة

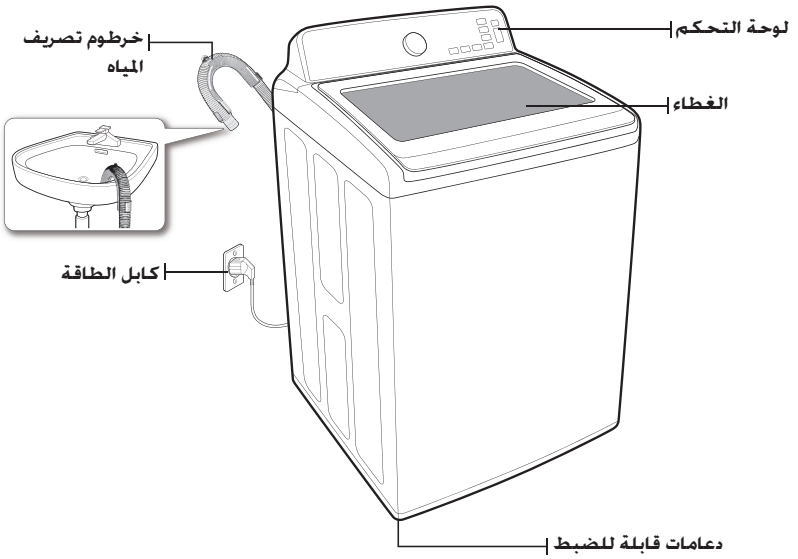

الأجزاء الواردة

حامل الخرطوم

دليل المستخدم

رباط الخرطوم المنزلق البلاستيكي


غطاء سحب الماء


خراطيم إمداد الماء

الأدوات اللازمة

مفتاح الربط

مفك مسطح

أداة قياس اختلاف المستوى

F900A_IB_DC68-03133M-05_AR.indd 11 2015/7/28 10:46:45

تركيب الغسالة

متطلبات الموقع الأساسية

المتطلبات الكهربية

- مصهر أو قاطع دائرة ٢٣٠ فولت ٦٠ هرتز ١٥ أمبير
- يوصى باستخدام دائرة فرعية مستقلة تخدم غسالتك فقط.
- غسالتك مجهزة بكابل طاقة.

تنبيه: ممنوع استخدام كبلات إضافية.

التوصيل الأرضي

التأريض الكهربائي لازم لهذا الجهاز.

يجب تأريض هذا الجهاز. في حالة وجود عطل أو توقف، فسيقوم التأريض بخفض خطر الصعقة الكهربائية عن طريق توفير مسار لمقاومة التيار الكهربائي على الأقل.

هذا الجهاز مجهز بكابل طاقة به قابس تاريض ثلاثي الشوكات للاستخدام في مصدر التيار الكهربائي المركب بطريقة ملائمة او المؤرض.

يجب توصيل القابس في مصدر التيار الكهربائي الملائم الذي يكون مركباً ومؤرضاً بطريقة ملائمة طبقاً لجميع القوانين واللوائح المحلية.

تحذير: قد تؤدي وصلة تأريض الجهاز المتصلة بطريقة غير ملائمة إلى زيادة خطر التعرض للصعقة الكهربائية. تحقق الأمر مع فني كهرباء أو فني خدمة إذا كنت غير متأكداً من إذا كان الجهاز مؤرضاً بطريقة ملائمة أم لا. يحظر استخدام قابس آخر غير المرفق مع الغسالة.-وفي حالة عدم ملاءمته مع مأخذ التيار، استعن بفني كهربائي مؤهل لتركيب مأخذ مناسب.

احتياطات السلامة الهامة

- لمنع حدوث خطر نشوب الحريق بدون داع، أو صعقة كهربائية أو إصابة شخصية، يجب إجراء جميع عمليات وضع الأسلاك والتأريض طبقاً لأحدث نسخة من قانون الكهرباء الوطني ANSI/FNPA، رقم ٧٠ والقوانين واللوائح المحلية. تقع المسؤولية الشخصية على صاحب الجهاز لتقديم خدمة كهربائية ملائمة لهذا الجهاز.

تنبيه: لا تقم بتوصيل السلك الأرضي بخطوط مواسير السباكة البلاستيكية، أو خطوط الغاز، أو مواسير الماء الساخن.

متطلبات المياه

لملء غسالتك بالماء بطريقة ملائمة في وقت مناسب، يلزم أن يكون ضغط الماء ما بين ٢٠ إلى ١١٦ رطل للبوصة المربعة (١٣٧ إلى ٨٠٠ كيلو باسكال).

قد يؤدي ضغط الماء الأقل من ٢٠ رطل للبوصة المربعة إلى خلل بصمام الماء، أو قد لا يتم السماح لصمام الماء بالإيقاف تماماً، أو زيادة وقت الملء بما يتجاوز الوقت المسموح به للغسالة والتسبب في إيقاف تشغيل غسالتك. الحد الزمني مدمج في المحكمات لمنع الغمر بالماء في منزلك إذا كان الخرطوم غير مثبت.

يجب أن تكون حنفيات المياه ضمن مسافة ٤ قدم/ ١٢٢ سم من الجزء الخلفي لغسالتك بما يتلاءم مع الخراطيم المدخلة الواردة مع غسالتك.

تتوافر الخراطيم المدخلة الملحقة بأطوال متعددة تصل إلى ١٠ قدم / ٢٧٥ سم للوصول إلى الحنفيات التي تكون بعيدة عن الجزء الخلفي لغسالتك.

لتفادي إمكانية تلف الماء:

- يجب أن تكون إمكانية الوصول إلى الحنفيات سهلة
- إيقاف الحنفيات عندما تكون الغسالة غير مستخدمة.
- افحص بشكل دوري للتأكد من عدم وجود تسرب من تجهيزات خرطوم إدخال الماء.

تحذير: افحص كل الوصلات الموجودة في صمام الماء والحنفية للتحري عن التسربات.

F900A_IB_DC68-03133M-05_AR.indd 12 2015/7/28 10:46:45

أداة التصريف

الارتفاع الموصى به للأنبوب القياسي هو ٣٩ بوصة/ ٩٩ سم. يجب أن يتم توجيه خرطوم التصريف عبر مشبك خرطوم التصريف إلى الماسورة القائمة. يجب أن تكون الماسورة القائمة كبيرة بما يكفي لاستيعاب القطر الخارجي لخرطوم التصريف. يجب توصيل خرطوم التصريف بالغسالة في المصنع.

سطح الأرضية

للحصول على أفضل أداء، يجب عليك تركيب غسالتك على أرضية صلبة. قد يلزم تقوية الأرضيات الخشبية بما يقلل من الاهتزاز، و/ أو حالات التحميل غير المتوازن. الأسطح الموضوع عليها السجاد والبلاط الناعم تعد من العوامل المساهمة في حدوث الاهتزاز بما قد يؤدي إلى تحرك الغسالة قليلاً أثناء دورة اللف.

لا تقم دوماً بتركيب غسالتك على أرضية أو مكان مدعوم بشكل ضعيف.

الاعتبارات الخاصة بالموقع

لا تركب غسالتك في أماكن قد تتعرض فيها المياه للتجمد، لكون غسالتك ستحتفظ دوماً ببعض الماء في أماكن صمام الماء، المضخة، والخرطوم. الماء المتجمد قد يؤدي إلى تلف السيور، المضخة والخراطيم والمكونات الأخرى.

تركيب القنطرة أو الخزانة

المسافات الدنيا بالنسبة لتركيب القنطرة أو الحجرة:

الجوانب - ١ بوصة / ٢٥ ملم

مقدمة الحجرة - ٢ بوصة / ٥١ ملم

الجزء الخلفي - ٦ بوصة / ١٥٢ ملم

الجزء العلوي - ٢١ بوصة / ٥٣٣ ملم

المسافة ما بين طرف صمام الماء والحائط

- الحالة ١. تجميع خرطوم الإمداد بعد التركيب: أكثر من ٣,٩ بوصة (١٠ سم).
- الحالة ٢. تجميع خرطوم الإمداد قبل التركيب: أكثر من ٢,٨ بوصة (٧ سم).

في حالة تركيب الغسالة والمجفف سوياص، يجب أن يكون الجزء الأمامي من الحجرة على مسافة لا تقل عن ٧٢ بوصة² (٤٦٥ سم²) به فتحة هواء غير معاقة. يجب أن لا تحتاج غسالتك إلى أي فتحة هواء معينة.

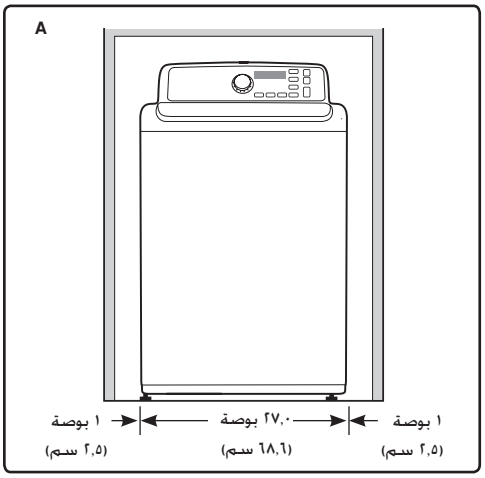

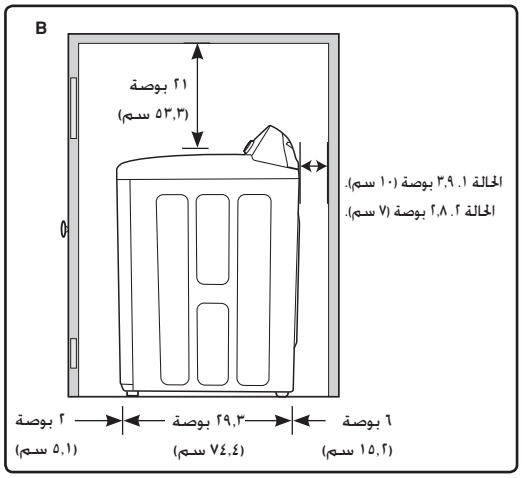

A. منطقة مجوفة

B. منظر جانبي - الحجرة أو المنطقة المحصورة

F900A_IB_DC68-03133M-05_AR.indd 13 2015/7/28 10:46:46

تركيب الغسالة

الأبعاد المطلوبة للتركيب

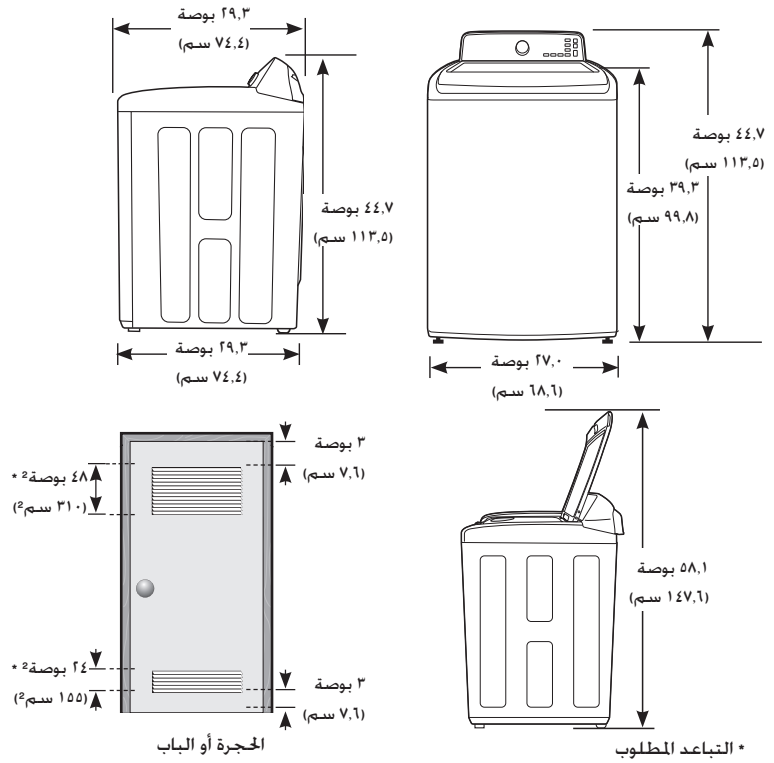

ملاحظة هامة لجهة التركيب

الرجاء قراءة التعليمات التالية بدقة قبل تركيب غسالتك.
يجب الاحتفاظ بهذه التعليمات للرجوع إليها في المستقبل.
نحن ننصحك بترك أمر تركيب هذه الغسالة لفني متخصص.

الشكل التوضيحي المتبع لعملية التركيب

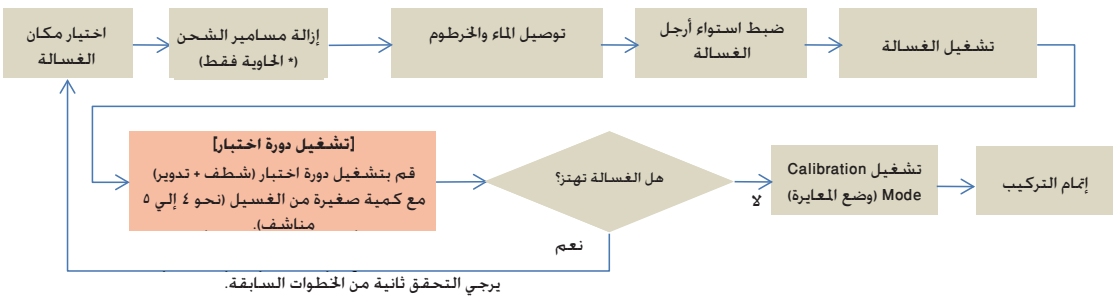
اختيار مكان الغسالة
إزالة مسامير الشحن (* الحاوية فقط)
توصيل الماء والخرطوم
ضبط استواء أرجل الغسالة
تشغيل الغسالة
[تشغيل دورة اختبار]
قم بتشغيل دورة اختبار (شطف + تدوير) مع كمية صغيرة من الغسيل (نحو ٤ إلي ٥ مناشف).
هل الغسالة تهتز؟
لا
تشغيل Calibration Mode (وضع المعايرة)
إتمام التركيب
نعم
يرجي التحقق ثانية من الخطوات السابقة.

الخطوة ١ اختيار مكان الغسالة

قبل تركيب الغسالة، تأكد من توفر ما يلي في المكان الذي قمت باختياره:

- سطح صلب ومستوي دون وجود سجاد أو بلاط قد يعوق عملية التهوية.
- مكان بعيد عن أشعة الشمس المباشرة.
- تتوفر به تهوية كافية.
- غير معرض لدرجات حرارة التجمد (درجات الحرارة الأقل من ٣٢ ف أو ٠ مئوية).
- يكون بعيدًا عن مصادر الحرارة مثل البترول أو الغاز.
- به مساحة كافية حتى لا ترتكز الغسالة على سلك الطاقة الخاص بها.

F900A_IB_DC68-03133M-05_AR.indd 14 2015/7/28 10:46:46

الخطوة ٢
توصيل الماء والتصريف

توصيل خرطوم توريد الماء

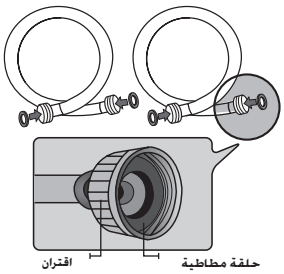

تنبيه: قبل تركيب خراطيم إمداد الماء، تأكد من أن الحشيات المطاطية داخل التجهيزات توجد على طرفي كل خرطوم ماء جديد. تركيب خراطيم إمداد الماء بدون الحشيات المطاطية قد يؤدي إلى تسرب الماء.

تنبيه: عند قيامك بتركيب الغسالة للمرة الأولى، تأكد من استخدام خراطيم جديدة. عدم القيام بذلك قد يؤدي إلى تسرب الماء أو التدفق الزائد بما قد يؤدي إلى تلف ممتلكاتك.

تنبيه: لا تقم بتوصيل خراطيم إمداد ماء متعددة سوياً لزيادة طول خرطوم الإمداد. قد تؤدي الخراطيم المتصلة بهذه الطريقة إلى حدوث تسرب وقد يتسبب التسرب في حدوث صعقة كهربائية. إذا كان الخرطوم قصيراً للغاية، فقم باستبداله بخرطوم أكثر طولاً وذو ضغط عالي.

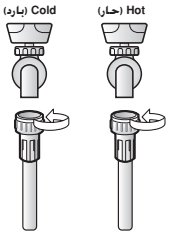

١. قم بتوصيل طرفي خراطيم إمداد الماء بحنفيات الماء الساخن والبارد.
٢. قم بإحكام ربط التجهيزات يدوياً حتى تصبح ملائمة. ثم قم بإحكام ربطها عن طريق لفها ثلثي مرتين بواسطة مفتاح ربط.

تنبيه: عندما تقوم بإحكام ربط التجهيزات، لا تقم بربطها بشكل محكم للغاية أو وضع شريط أو مانع تسرب على الحنفيات أو فتحات سحب إمداد الماء. قد يؤدي هذا إلى تلف التجهيزات.

بعد توصيل خرطوم توريد الماء بالمحول، تأكد من توصيله بشكل صحيح عن طريق سحب خرطوم توريد الماء لأسفل.

٣. قم بوضع الأطراف غير المتصلة للخراطيم في قادوس وافتح الحنفيات المتصلة بخرطومي إمداد الماء لمدة ١٠ أو ١٥ ثانية لإزالة أي مواد غريبة من الخراطيم. قم بغلق الحنفيات قبل المواصلة.

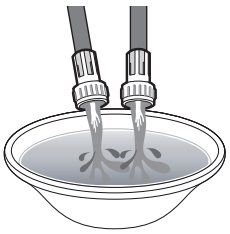

٤. قم بتوصيل أطراف خراطيم إمداد الماء بوصلات سحب إمداد الماء في الجزء الخلفي من الغسالة.

تنبيه: يجب توصيل خرطوم إمداد الماء المتصل بحنفية الماء الساخن بمأخذ إمداد الماء الساخن ويجب توصيل خرطوم الماء بحنفية الماء البارد المتصلة بمأخذ إمداد الماء البارد.

٥. قم بإحكام ربط التجهيزات يدوياً حتى تصبح ملائمة. ثم قم بإحكام ربطها عن طريق لفها ثلثي مرتين بواسطة مفتاح ربط.

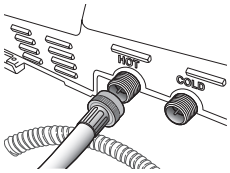

للتأكد من استخدام الماء المناسب، قم بتوصيل حنفية الماء البارد وحنفية الماء الساخن. إذا لم يتم التوصيل بواحدة من الحنفيتين أو كلاهما، فسوف يظهر رسالة خطأ "4E" (عدم الملء)

إذا لم ترغب في استخدام خرطوم إمداد الماء الساخن، فقم بإدخال غطاء مأخذ الماء في فتحة مأخذ إمداد الماء الساخن.

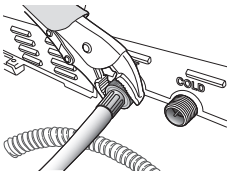

تنبيه: تأكد من عدم التواء أو ثني خراطيم إمداد الماء. إذا كانت الخراطيم ملتوية أو مثنية، فقد يحدث تسرب بالخراطيم والتسبب في حدوث صعقة كهربائية بسبب تسرب الماء.

٦. قم بفتح إمداد الماء البارد والماء الساخن وتحقق من أن كل وصلات سحب إمداد الماء والحنفيات للتحري عن وجود أي تسرب.

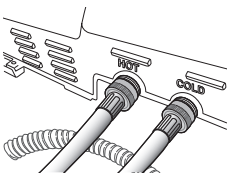

F900A_IB_DC68-03133M-05_AR.indd 15 2015/7/28 10:46:47

تركيب الغسالة

توصيل خرطوم التصريف

يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:

فوق حافة حوض الغسيل:

قم بتثبيت الموجه بجانب جدار الحوض بواسطة الخطاف أو بالصنبور بواسطة قطعة سلك لمنع تحرك خرطوم التصريف.

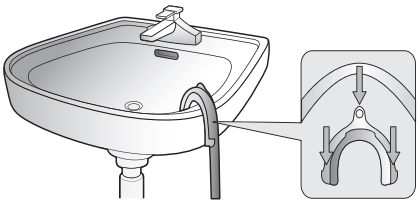

في الأنبوب القياسي أو حوض الغسيل

يجب أن لا يكون الأنبوب القياسي أقصر من ٣٩ بوصة (٩٩ سم) ولا أطول من ٩٦ بوصة (٢٤٥ سم).

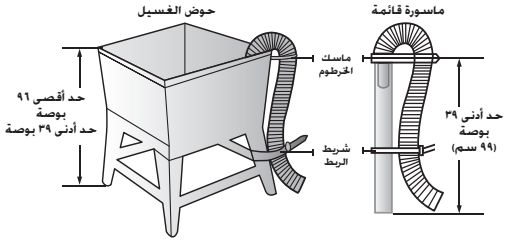

تأكد من أن الوصلة ما بين خرطوم التصريف والأنبوب القياسي ليس بها أي عيوب أو مسدودة.

قم بتثبيت حامل الخرطوم علي مسافة ٤ بوصة (١٠ سم) من نهاية خرطوم التصريف. في حال كانت المسافة بين حامل الخرطوم ونهاية خرطوم التصريف أكبر من ٤ بوصة (١٠ سم) فإن ذلك من شأنه نشر العفن أو البكتريا داخل الغسالة.

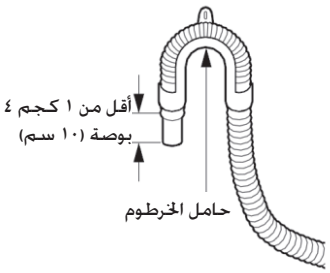

يُمكن تثبيت خرطوم التصريف حتى ٩٦ بوصة (٢٤٥ سم) بحد أقصي. لكن إمكانية التصريف قد تقل عند هذا الارتفاع. وبسبب ذلك وجود رائحة في الغسالة نظراً للماء المتبقي في نظام التصريف.

إذا تم تثبيت خرطوم التصريف علي ارتفاع اقل من ٣٩ بوصة (٩٩ سم) فإنه مياه التصريف قد ترتد إلي دورة العمل الخاصة بالغسالة مما يسبب ظاهرة السيفون. وهو ما يسبب ظهور رسالة الخطأ "4E".

الخطوة ٣

ضبط مستوى الغسالة

الرجاء التحقق إذا كانت الغسالة مستوية عن طريق فحص وضع الحوض:

١. قم بزلق الحلقة في موضعها.
٢. قم بفتح غطاء الغسالة، وضب الماء في الحوض حتى يصل مستوى الماء إلى أقل من مستوى المضخة النابضة.

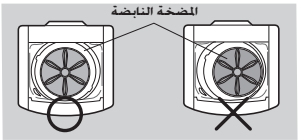

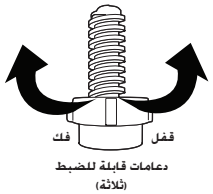

٣. إذا كانت الغسالة مستوية، فسيكون مستوى المضخة النابضة موضوع عند منتصف الماء كما هو موضح في الشكل. إذا لم يكن الأمر كذلك، فقم بضبط مستوى الغسالة عن طريق لف قدم ضبط المستوى الأمامي باتجاه حركة عقارب الساعة أو عكس عقارب الساعة حسب الضرورة.

أدر قدم ضبط المستوى الأمامي باتجاه حركة عقارب الساعة لرفع الغسالة، وعكس اتجاه حركة عقارب الساعة لخفض الغسالة.

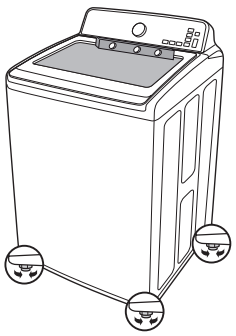

F900A_IB_DC68-03133M-05_AR.indd 16 2015/7/28 10:46:47

الخطوة ٤

تزويد الغسالة بالطاقة

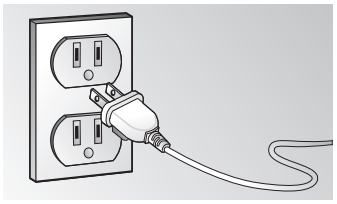

قم بتوصيل سلك الطاقة في مصدر تيار كهربائي ثلاثي الشوكات مؤرض جيداً ٢٣٠ فولت ٦٠ هرتز معتمد محمي بواسطة مصهر ١٥ أمبير أو قاطع دائرة مماثل.

غسالتك مؤرضة عبر سلك طاقة ثلاثي الشوكات عندما يتم توصيلها في مصدر تيار كهربائي مؤرض ثلاثي الشوكات.

اختبار تشغيل

تأكد من أنك قمت بتركيب الغسالة الخاصة بك بطريقة صحيحة من خلال تشغيل دورة Rinse+Spin (شطف+تجفيف) بعد الانتهاء من التركيب.

الخطوة ٥

تشغيل دورة تجريبية

قم بتشغيل الدورة التجريبية كما هو متبع للتحقق إذا كانت غسالتك مركبة بطريقة صحيحة أم لا.

١. قم بوضع ٦ باوند تقريباً من الملابس في حوض الغسالة.
٢. اضغط على زر **Power (الطاقة)** لتشغيل غسالتك.
٣. حدد دورة Rinse + Spin (دوران + شطف) عن طريق إدارة **Cycle Selector (قرص تحديد الدورة)**.
٤. اضغط على زر **Start/Pause (تشغيل/توقف)** لبدء الدورة التجريبية.
٥. يجب عدم اهتزاز الغسالة أو تعريضها للتذبذب بشكل مفرط عندما يتم تزويد الماء أو عند الغسيل أو العصر باللف. ويجب أن يتم التصريف بشكل جيد كل دورة العصر.

إذا حدث تسرب للماء أثناء إمداده أو تصريفه. فافحص وصلات الماء. الرجاء الإطلاع على قسم "توصيل الماء والتصريف" في صفحتي ١٥-١٦ لمعرفة التعليمات.

في حالة اهتزاز الغسالة وتذبذبها بشكل مفرط. فالرجاء ضبط مستوى غسالتك مرة أخرى. الرجاء الإطلاع على قسم "ضبط مستوى الغسالة" في صفحة ١٦ لمعرفة التعليمات.

الخطوة ٦

وضع المعايرة

تكتشف غسالة Samsung وزن الغسيل تلقائيًا.
لاكتشاف الوزن بطريقة أفضل دقة. الرجاء تشغيل "وضع المعايرة" بعد التركيب.
لتشغيل Calibration Mode (وضع المعايرة). الرجاء اتباع تلك الخطوات:

١. قم بتفريغ الغسالة من الغسيل أو أي محتويات أخري بداخلها.
٢. اضغط على زري Delay Start (بدء متأخر) و .Temp (درجة الحرارة) في وقت واحد. ثم اضغط على زر Power (الطاقة). يتم تشغيل الجهاز.
٣. اضغط على الزر **Start/Pause (تشغيل/توقف)** لتنشيط "وضع المعايرة".
٤. تدور المضخة النابضة باتجاه حركة عقارب الساعة وعكس اتجاه عقارب الساعة لمدة ١ دقيقة تقريباً.
٥. عند الانتهاء من ضبط "وضع المعايرة". تظهر الرسالة "End" ويتم إيقاف تشغيل الغسالة تلقائيًا. الغسالة جاهزة للاستخدام الآن.

F900A_IB_DC68-03133M-05_AR.indd 17 2015/7/28 10:46:47

تعليمات التشغيل

تحذير: لتقليل إمكانية نشوب حريق أو صعقة كهربائية أو إصابة للأشخاص أثناء استخدام الغسالة، قم باتباع احتياطات الأمان الأساسية بما في ذلك ما يلي:

وضع الملابس بالغسالة

- عليك ملء حوض الغسيل بالملابس الجافة غير المثنية أو المطوية وذلك بوضعها وضعًا مُنتظمًا بغية زيادة كفاءة الغسيل والحيلولة دون زيادة البلى أو تجعد الملابس المراد غسلها.
  - تأكد من بسط الغسيل بسطًا مستويًا.

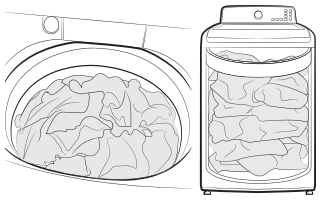

- غسيل الملابس الحساسة مثل حمالات الصدر والجوارب والملابس الداخلية للسيدات في دورة Delicates/Hand Wash (غسيل يدوي/ناعم) مع الأشياء الأخرى المماثلة.
- عند غسيل كمية كبيرة من الأشياء والملابس أو بعض الأشياء الأقل التي لا تؤدي لامتلاء حوض الغسيل تماماً - على سبيل المثال السجاد، الوسائد، الألعاب المحشوة، أو سترة واحدة أو سترتين - فقم بإضافة بعض المناشف لتحسين أداء العصر بالدوران.
- لا تقم بإدخال أي أشياء كبيرة الحجم باستثناء الشراشف في هذه الدورة.

أثناء دورة العصر بالدوران، قد تقوم الغسالة بإضافة كمية إضافية من الماء لإعادة توزيع الملابس وتصحيح عدم التوازن بداخل الحلة.

- عندما تكون حمولة الغسالة متسخة اتساخاً شديداً، فلا تقم بزيادة تحميل غسالتك لضمان نتائج تنظيف جيدة.
- لإضافة أشياء منسية:
  ١. اضغط على زر **Start/Pause (تشغيل/توقف)** لإيقاف الغسالة مؤقتاً.
  ٢. انتظر لحين فك قفل الباب أوتوماتيكياً، ثم افتح الباب.
  ٣. قم بإضافة الشيء، واغلق الباب، ثم اضغط على زر **Start/Pause (تشغيل/توقف)**. ستواصل الدورة عملها.

بدء التشغيل

١. وضع الملابس بالغسالة
٢. إضافة مادة منظفة سائلة (أو مسحوق) والإضافات في وحدة التوزيع (انظر صفحات ٢٥-٢٧).
٣. حدد الدورة والخيارات المناسبة لكمية الملابس التي تم إضافتها. (انظر صفحات ١٩ - ٢٤).
٤. قم بإغلاق الغطاء.
٥. اضغط على الزر **Start/Pause (تشغيل/توقف)**.
٦. تتم إضاءة مصباح مؤشر الغسيل.
٧. سيظهر وقت الدورة المقدر في شاشة العرض.
قد يتفاوت الوقت ليشير إلى الوقت المتبقي في الدورة بشكل أفضل.

قد يتفاوت الوقت الفعلي للدورة عن الوقت المقدر في شاشة العرض استناداً إلى ضغط الماء، ودرجة حرارة الماء والمادة المنظفة والملابس المراد غسيلها.

٨. قبل بدء الغسالة في الامتلاء، قد تقوم بإجراء سلسلة من الضوضاء على شكل طقطقة للتحقق من قفل الباب وإجراء دورة تصريف سريعة.

- عند انتهاء الدورة، سينطفئ مصباح قفل الباب وتظهر الكلمة "End" (نهاية) على شاشة العرض.
- الضغط على زر **Power (الطاقة)** سيؤدي إلى إلغاء الدورة وإيقاف الغسالة.
- ستتم إضاءة مصابيح إشارة Wash (غسيل)، وRinse (شطف)، وSpin (دوران) العصر أثناء أجزاء هذه الدورة.

F900A_IB_DC68-03133M-05_AR.indd 18 2015/7/28 10:46:47

غسل الملابس

نظرة عامة على لوحة التحكم

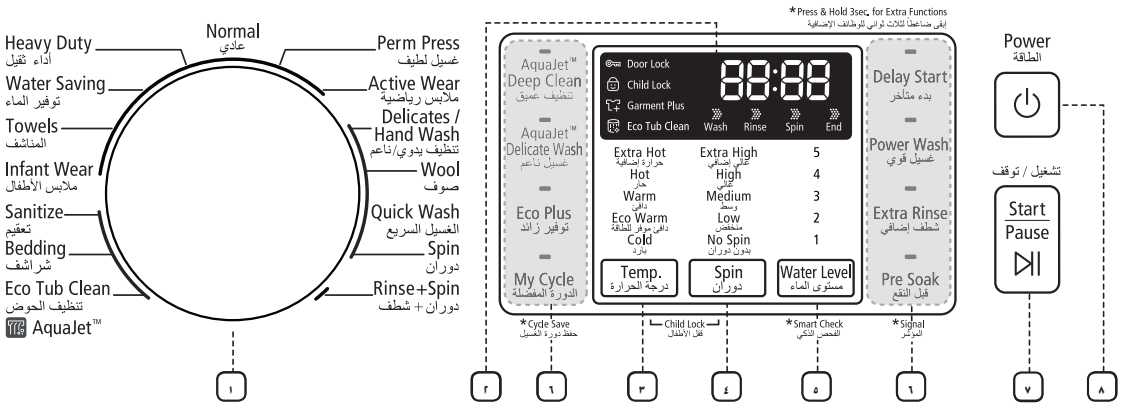

١ قرص تحديد الدورة

حدد الدورة الملائمة لنوع الحمولة.

تُحدد الدورة التي تختارها نوع التدوير وسرعة الدوران للدورة.

لتقليل تجعيد الملابس المراد غسلها، الرجاء اختيار دورة Perm Press (تنشيف موج).

Normal (عادي)- تُناسب معظم الأقمشة بما في ذلك القطن والكتان وغير ذلك من الملابس عادية الاتساخ.

Heavy Duty (أداء ثقيل) - بالنسبة للملابس الملونة والثابتة والملوثة بأوساخ شديدة.

Water Saving (توفير الماء) - هذه البرنامج مصمم خصيصاً بما يتيح لك غسيل الملابس بشكل فعال مع تقليل مقدار الماء.

Water Saving (توفير الماء)، Warm temperature (ودرجة الحرارة الدافئة)، High spin (والعصر العالي)، (والأوساخ العادية) Normal soil هو برنامج موصى باستخدامه للملابس القطنية المتسخة بأوساخ عادية.

Towels (المناشف)- تُخصص هذه الدورة لمناشف الحمام وأدوات الاستحمام والممسحات.

Infant Wear (ملابس الأطفال)- لملابس الأطفال / ملابس الرضع عادية الاتساخ والملابس الصغيرة.

Sanitize (تعقيم)- تُخصص دورة Sanitize (تعقيم)للملابس شديدة الاتساخ ذات الألوان الثابتة. يجب أن تقل الحمولة عن ٥,٠ كجم.

Bedding (شراشف) - للأشياء الثقيلة كالبطانيات والشراشف. عند قيامك بغسيل اللحاف، استخدم مادة منظفة سائلة.

Eco Tub Clean (تنظيف الحوض) - يستخدم للتخلص من الأوساخ والبكتريا من الحوض. الاستخدام المنتظم (بعد كل ٢٠ عملية غسل) من الأشياء الموصى بها. لا حاجة لإضافة مادة منظفة أو تبييض. (انظر صفحة ٣٠).

Perm Press (تنشيف موج) - من أجل الغسيل-و-الارتداء الفوري. للأقمشة الصناعية والملابس المتسخة بأوساخ بسيطة أو عادية.

Active Wear (ملابس رياضية) - تُخصص هذه الدورة لغسيل ملابس التمارين مثل البدل والرياضية وسراويل التدريب وغير ذلك من ملابس الأداء الحركي. توفر هذه الدورة تنظيف فعال للأوساخ مع أداء ناعم رقيق للأقمشة ذات التركيب الخاص.

Delicates/Hand Wash (غسيل يدوي/ناعم) - بالنسبة للأقمشة الشفافة وحمالات الصدر، والملابس النسائية التحتية، والملابس الحريرية وغيرها من الأقمشة التي تغسل يدوياً فقط. للحصول على أفضل النتائج، استخدم مادة منظفة سائلة.

Wool (صوف) - تستخدم هذه الدورة لغسل الملابس الصوفية التي يسمح بوضعها في الغسالة فقط. يجب أن تقل الحمولة عن ٤,٠ كجم.

- تعمل دورة غسيل الصوف بتحريك الحاوية أفقياً للحفاظ على خصائص أقمشة الصوف وبما يحول دون تضرر الأقمشة. ثم تتوقف دورة الغسيل لفترة لما يتيح للغسيل امتصاص الماء. لذا فإن هذا التوقف في دورة غسيل الصوف يُمثل أمراً عادياً.
- نوصي هنا باستخدام منظف عادي لمنع الضرر بما يحول دون تضرر القماش وبما يحسن نتائج الغسيل.

Quick Wash (الغسيل السريع) - لغسيل الملابس الملوثة بأوساخ بسيطة اللازم تنظيفها بسرعة.

Spin (دوران) - تصريف الماء والعصر على سرعة عالية.

Spin + Rinse (دوران + شطف) - للملابس التي تحتاج إلى الشطف فقط أو لإضافة منعم الأقمشة الذي يتم إضافته أثناء الشطف فقط.

F900A_IB_DC68-03133M-05_AR.indd 19 2015/7/28 10:46:48

غسل الملابس

٢ شاشة العرض	تقديم المعلومات والعمليات التشخيصية في الوقت نفسه إطلاعك باستمرار على حالة الدورة والوقت المتبقي.
٣ زر تحديد درجة الحرارة	اضغط على الزر بشكل متكرر للتبديل بين خيارات درجة حرارة الماء المختلفة. **Extra Hot (حرارة إضافية)** - ُخصص Extra Hot (حرارة إضافية) للملابس شديدة الاتساخ وذات الألوان الثابتة. متاح فقط مع دور Sanitize (تعقيم). **Hot (حار)** - الملابس البيضاء والمتسخة بأوساخ شديدة والملونة. **Warm (دافئ)** - الأشياء الملونة. **Eco Warm (دافئ موفر للطاقة)** - غسيل الملابس الملونة المتسخة بأوساخ متوسطة. وأكثر الملابس غير المجعدة. **Cold (بارد)** - الملابس ذات الألوان الفاتحة والمتسخة بأوساخ بسيطة.
٤ زر تحديد Spin (دوران)	اضغط على الزر بشكل متكرر للتبديل بين خيارات سرعات العصر المختلفة. **Extra High (عالي إضافي)** - حيث يجري إزالة الماء من الأحمال عبر التدوير. **High (عالي)** - يستخدم بالنسبة للملابس الداخلية، التي شيرتات، الجينز، الملابس القطنية المتينة. **Medium (وسط)** - يستخدم لملابس الجينز. أو الملابس الخالية من التجعيد أو الملابس من نوعية الغسل والارتداء والأقمشة الصناعية. **Low (منخفض)** - استخدم هذا الخيار مع الأشياء الرقيقة التي تحتاج إلى سرعة دوران بطيئة. **No Spin (بدون دوران)** - تصريف غسالتك بدون دوران. استخدم هذا الخيار للملابس الرقيقة للغاية التي لا تتحمل أي دوران.
٥ زر Water Level (مستوي الماء)	يجري تعديل مستوي الماء بشكل أوتوماتيكي. ومع ذلك يمكنك انتقاء Water Level (مستوي الماء) يدوياً بالضغط علي هذا الزر.
٦ تحديد خيار الدورة	اضغط على هذه الأزرار لتحديد خيارات الدورة المختلفة. **AquaJet™ Deep Clean (تنظيف عميق)**يحسن من أداء الغسيل خلال عملية نشر رذاذ AquaJet. يُمكن تعديل مستوي الماء. **AquaJet™ Delicate Wash (غسيل ناعم)** - تقلل أداء المضخة النابضة خلال رش الرذاذ والتدوير فقط بما يُحسن ويطور حماية القماش. **Eco Plus (توفير زائد)** - لزيادة عمليات توفير الطاقة في دورات الغسيل بغسالتك. (أقل استهلاك للماء الساخن) **My Cycle (الدورة المفضلة)** - اضغط مع الاستمرار لمدة ٣ ثواني من أجل التوفير. إنشاء، و/ أو استخدام الدورة التي تقوم بإجرائها مع درجة حرارة مخصصة، دوران، الخيار، وما شابه ذلك **Delay Start (بدء متأخر)** - تأخير بدء أي دورة لمدة تصل إلى ٢٤ ساعة بمقدار ساعة واحدة. تشير الساعة المعروضة إلى الوقت الذي يتم عنده بدء الغسيل. **Power Wash (غسيل قوي)** - يمكنك من التحكم بقوة تدفق الماء حيث يجري الغسيل والتدوير عبر منظم المحرك الرقمي بطريقة أذكي تناسب الأقمشة. **Extra Rinse (شطف إضافي)**- حيث يجري تغير وضع الشطف الخفيف إلي شطف عميق ثم شطف خفيف مرة ثانية. **Pre Soak (قبل النقع)** - إزالة البقع بشكل أكبر عن طريق تخصيص وقت إضافي.
٧ زر تحديد Start/Pause (تشغيل/توقف)	اضغط لإيقاف الدورة مؤقتاً وإعادة تشغيلها.
٨ الزر Power (الطاقة)	اضغط مرة واحدة لتشغيل غسالتك. اضغط مرة أخرى لإيقاف تشغيل غسالتك. في حال ترك الغسالة قيد التشغيل لفترة تزيد عن ١٠ دقائق بدون لمس أي أزرار، فسيتم إيقاف تشغيل الطاقة أوتوماتيكياً.

F900A_IB_DC68-03133M-05_AR.indd 20 2015/7/28 10:46:48

Child Lock (قفل الأطفال) [ ]

قفل الأطفال يمنع الأطفال من العبث بالغسالة.

تنشيط وظيفة قفل الأطفال

اضغط مع الاستمرار على زري .**Temp (درجة الحرارة)**، و **Spin (دوران)** في وقت واحد لمدة ٣ ثواني تقريباً.

- عند قيامك بتنشيط وظيفة قفل الأطفال، يومض مصباح "قفل الأطفال [ ]"

استخدام وظيفة قفل الأطفال

إذا كان الغطاء مفتوحاً عندما تكون وظيفة قفل الأطفال قيد التشغيل، فسيتم عرض "dE" وانطلاق الإنذار.

- إذا كان مستوى الماء في الحوض أعلى من مستوى الماء الآمن، فسيتم عرض "dE" على شاشة العرض LED وتبدأ الغسالة الكهربائية في تصريف الماء دفعاً بعد ٣٠ ثانية.
- إذا كان مستوى الماء في الحوض أعلى من مستوى الماء الآمن ووظيفة قفل الأطفال قيد التشغيل عندما يكون الباب مفتوحاً، فستعرض الكلمة "CL" على شاشة العرض LED حتى لو كانت طاقة الغسالة الكهربائية قيد إيقاف التشغيل وتصريف ماء الغسالة بقوة الدفع.
- حتى لو كانت طاقة الغسالة الكهربائية قيد إيقاف التشغيل، وإذا كان الغطاء مفتوحاً عندما يكون مستوى الماء في الحوض أعلى من مستوى الماء المضبوط، ستعرض كلمة "CL" على شاشة العرض LED بدون انطلاق الإنذار وبدء الغسالة في تصريف الماء. عند الانتهاء من عملية التصريف، سيتم إيقاف تشغيل الطاقة مرة أخرى.
- لقد قمت بتنشيط وظيفة قفل الأطفال أثناء سريان عملية الغسيل وبهذا فإن زر تشغيل/ إيقاف لن يعمل.
- بعد التصريف الإجباري، يومض الكود "CL" على شاشة العرض بفاصل مقداره ١ ثانية ويدخل المنتج إلى النمط "CL". (عندما يكون المنتج في نمط "CL"، يعمل الزر **Power (الطاقة)** فقط.)
- لإلغاء النمط "CL"، تحتاج إلى إيقاف تشغيل الطاقة ثم تعود لوضع التشغيل مرة أخرى.
- لإلغاء نمط "dE"، قم بإلغاء تنشيط وظيفة قفل الأطفال. لإلغاء تنشيط وظيفة قفل الأطفال، اضغط باستمرار على زري .Temp (درجة الحرارة)، و **Spin (دوران)** في وقت واحد لمدة ٣ ثواني على الأقل.

إضافة الملابس عندما يكون قفل الأطفال قيد التشغيل

- لإضافة ملابس، قم بإلغاء تنشيط وظيفة قفل الأطفال. لإلغاء تنشيط وظيفة قفل الأطفال، اضغط باستمرار على زري .**Temp (درجة الحرارة)**، و **Spin (دوران)** في وقت واحد لمدة ٣ ثواني على الأقل. انظر (خيار الإيقاف المؤقت) على صفحة ٢٤ لمعرفة التفاصيل الإضافية.

إلغاء تنشيط وظيفة قفل الأطفال

اضغط مع الاستمرار على زري .**Temp (درجة الحرارة)**، و **Spin (دوران)** في وقت واحد لمدة ٣ ثواني تقريباً.

- عند قيام بإلغاء تنشيط وظيفة قفل الأطفال، يتم إيقاف مصباح "قفل الأطفال [ ]"
- وظيفة قفل الأطفال تقوم بمنع الأطفال أو العاجزين من التشغيل العشوائي للغسالة وتعريض أنفسهم للإصابة.
- في حالة دخول الطفل للغسالة الكهربائية، فقد يتعرض الطفل للانحشار والاختناق.

تنبيه

- بعد قيامك بتنشيط وظيفة قفل الأطفال، فإنها تستمر في العمل حتى لو كانت الطاقة قيد إيقاف التشغيل.

تنبيه

- استخدام القوة في فتح الغطاء قد يؤدي إلى الإصابة أو تلف المنتج.

لإضافة الملابس المراد غسلها بعد قيامك بتنشيط وظيفة قفل الأطفال، يجب عليك أولاً إيقاف تشغيل أو إلغاء تنشيط وظيفة قفل الأطفال.

F900A_IB_DC68-03133M-05_AR.indd 21 2015/7/28 10:46:48

غسل الملابس

Signal (المؤشر)

يمكن تحديد وظيفة Sound Off (إيقاف تشغيل الصوت) مع كافة الدورات.

Garment Plus (الملابس+)

يمكنك إضافة أو إخراج الملابس حتى بعد الغسيل، طالما ظل مصباح "**Garment Plus (الملابس+)**" قيد الإضاءة. الضغط على زر **Start/Pause (تشغيل/توقف)** سيؤدي إلى فك قفل الغطاء. إذا قمت بفتح الغطاء وترغب في مواصلة دورة الغسيل، فقم بإغلاق الغطاء، ثم اضغط على زر **Start/Pause (تشغيل/توقف)**.

إذا قمت بتنشيط قفل الأطفال، فيجب عليك إلغاء تنشيطه أولاً. انظر صفحة ٢١.

My Cycle (الدورة المفضلة)

لنقوم بحفظ دورة الغسيل المخصصة (درجة الحرارة، الدوران، وما شابه ذلك)، ثم استدعائها واستخدامها بضغطة زر واحد بكل سهولة.

لحفظ الدورة والخيارات المحددة كدورة الغسيل، قم باتباع هذه الخطوات:

١. اضغط على الزر **Power (الطاقة)**.
٢. حدد الدورة باستخدام **Cycle Selector (قرص تحديد الدورة)**.
٣. بعد الانتهاء من تحديد الدورة، قم بتعيين كل خيار تريده.

راجع "جدول الدورة" الموجود بالصفحة ٣٦ للتعرف على إعدادات الخيارات المتوفرة بكل دورة.

٤. ثم يمكنك تخزين الدورة والخيارات المحددة بواسطة الضغط باستمرار على الزر **My Cycle (الدورة المفضلة)** لمدة أكثر من ٣ ثوانٍ بالوضع My Cycle (الدورة المفضلة). يتم عرض الدورة والخيارات التي قمت بتحديدها في المرة القادمة التي تختار فيها وظيفة My Cycle (الدورة المفضلة).
٥. اضغط على زر My Cycle (الدورة المفضلة) للتحميل واستخدام خيارات دورة الغسيل المحفوظة. ستشير إضاءة "My Cycle (الدورة المفضلة)" إلى أن الدورة قيد التشغيل. كما ستومض الإضاءة الخاصة بالخيارات والدورة المختارة.

يمكنك تغيير إعدادات My Cycle (الدورة المفضلة) بواسطة تكرار العملية نفسها المذكورة أعلاه.
سيتم عرض آخر الإعدادات في المرة التالية التي تقوم خلالها باختيار وظيفة My Cycle (الدورة المفضلة).

في حالة الضغط على زر My Cycle (الدورة المفضلة) ثم تركه لمدة ٣ ثوانٍ، يتم ظهور الدورة والخيارات السابقة التي تم حفظها. إذا قمت بالضغط مع الاستمرار على My Cycle (الدورة المفضلة) لمدة ٣ ثوانٍ أو أكثر، يتم حفظ الدورة والخيارات المعينة حاليًا ويومض مؤشر LED لمدة ٣ ثوانٍ.

Delay Start (بدء متأخر)

يمكنك ضبط الغسالة الكهربائية على البدء أوتوماتيكياً في وقت لاحق عن طريق اختيار وقت متأخر.
تشير الساعة المعروضة إلى الوقت الذي سيتم عنده بدء الغسيل.

١. قم بضبط برنامج الغسيل.
٢. اضغط على الزر **Delay Start (بدء متأخر)** بشكل متكرر حتى تصل إلى وقت التأجيل المطلوب.
٣. اضغط على الزر **Start/Pause (تشغيل/توقف)**. سيضيء مؤشر Delay Start (بدء متأخر) . وتبدأ الساعة بالعد التنازلي حتى تصل إلى الوقت المحدد.
٤. لإلغاء وظيفة Delay Start (بدء متأخر)، اضغط على الزر **Power (الطاقة)** ثم قم بتشغيل الغسالة من جديد.

F900A_IB_DC68-03133M-05_AR.indd 22 2015/7/28 10:46:48

Pre Soak (قبل النقع)

استخدم هذه الوظيفة عندما تكون الملابس المراد غسلها متسخة بأوساخ شديدة أو بقع شديدة. تحسن هذه الوظيفة من أداء الغسيل عن طريق إضافة دورة Pre Soak (قبل النقع).

- إذا قمت بتحديد هذه الوظيفة، فستتم زيادة وقت الدورة الكلي بمقدار ١٥ دقيقة.
- عندما تبدأ دورة Pre Soak (قبل النقع)، تكرر الغسالة الكهربائية دورة الغسيل بعد التزود بالماء، ثم تنفذ دورة نقع لمدة ١٥ دقائق.
- عند الانتهاء من دورة Pre Soak (قبل النقع)، تبدأ دورة الغسيل المكونة بدون تصريف الماء.

AquaJet™

يُمكن للغسيل أن يصبح أكثر رقة عن غيرها من الغسالات ذات السعات الكبرى التقليدية خلال الرش القوي وتدوير المنظف السائل الناتج عن منضجة AquaJet™.

- AquaJet™ Deep Clean (تنظيف عميق): إذا كان جري اختيار وضع AquaJet™ Deep Clean (تنظيف عميق) فإنه يُمكن تحسين أداء الغسالة بإضافة الرش. ويمكن ضمان الكمية الكافية من الماء بتعديل مستوي الماء.
- AquaJet™ Delicate Wash (غسيل ناعم): يجري التحكم في عمل المضخة النابضة إلي الحد الأدنى وغسل الأقمشة الرقيقة خلال رش الماء وتدوير الحاوية وهو ما يقلل تلف أو ضرر الأقمشة إلي الحد الأدنى. إذا تطلب غسيل الأقمشة الرقيقة توجيه قدر كبير من الاهتمام إلي قوة الغسيل، فإنه يجري اختيار دورة Delicates/Hand Wash (غسيل يدوي/ناعم) أما إذا كان الاهتمام الرئيس ينصب علي العناية بالقماش، فإنه يجري اختيار AquaJet™ Delicate Wash (غسيل ناعم).

AquaJet™ (غسيل ناعم) Delicate Wash	AquaJet™ (تنظيف عميق) Deep Clean	البرامج
غير متوفرة	متوفرة	Normal (عادي)، Heavy Duty (أداء ثقيل)، Perm Press (تنشيف موج)، Water Saving (توفير الماء)، Active Wear (ملابس رياضية)، Towels (المناشف)،Infant Wear (ملابس الأطفال)، Rinse + Spin (دوران + شطف)
غير متوفرة	غير متوفرة	Sanitize (تعقيم)، Bedding (شراشف)، Eco Tub Clean (تنظيف الحوض)، Wool (صوف)، Quick Wash (الغسيل السريع)، Spin (دوران)
متوفرة	غير متوفرة	Delicates/Hand Wash (غسيل يدوي/ناعم)

Eco Plus (توفير زائد)

تعمل هذه الوظيفة على ضبط درجة الحرارة إلى حد ما أقل من دورة الغسيل النموذجية وتطيل من وقت الغسيل بشكل طفيف. عندما يتم زيادة وقت غسيل الملابس بشكل طفيف، يصبح بالإمكان الحفاظ على نفس مستوى أداء الغسيل مع ماء أكثر برودة. تعمل هذه الوظيفة على خفض استهلاك الطاقة والحفاظ على نوعية وجودة الغسيل.

Mist Shower (مغسلة الرذاذ)

تقوم Mist Shower (مغسلة الرذاذ) برش الماء من الفوهة التي تكون مستقلة عن نظام إمداد الماء الرئيسي. يؤدي هذا إلى نقع الملابس بالماء من بداية دورة الغسيل وضمان الحصول على غسيل فعال حتى عندما تكون كمية الماء صغيرة.

(قد لا تعمل وظيفة Mist Shower (مغسلة الرذاذ) في حالة وجود كميات كبيرة للغاية من الملابس)

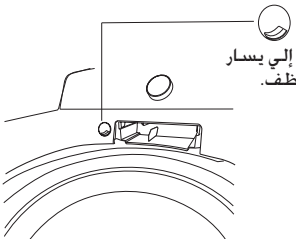

Smart Check (الفحص الذكي)

تتيح هذه الوظيفة لك التحقق من حالة الغسالة الكهربائية باستخدام الهاتف الذكي.

١. لتمكين وظيفة Smart Check (الفحص الذكي)، اضغط باستمرار على مفتاح Water Level (مستوي الماء) لمدة ٣ ثواني بعد تشغيل الطاقة أو عند حدوث خطأ.
   - يتم حذف تاريخ كود الخطأ بعد استخدامك لهذه الوظيفة.
٢. تتم إضاءة مؤشر Smart Check (الفحص الذكي) على شاشة العرض.
٣. قم بتشغيل تطبيق Smart Check (الفحص الذكي) على هاتفك الذكي.
   - تعد وظيفة الاختبار الذكي ذات أولوية بالنسبة لأجهزة Galaxy S، وGalaxy S2، وGalaxy S3، وGalaxy S4، وiPhone 4، و iPhone 4S ، وiPhone 5.
٤. قم بتركيز كاميرا الهاتف الذكي على لوحة العرض بالغسالة.
٥. إذا تم تركيز كاميرا الهاتف الذكي على لوحة العرض بالغسالة، فسيتم التعرف على رسائل اللوحة ورسائل الخطأ أوتوماتيكياً ونوع الخطأ وعرض الإجراءات المضادة على الهاتف الذكي.
٦. إذا فشل الهاتف الذكي في التعرف على كود الخطأ أكثر من مرتين، فالرجاء إدخال كود الخطأ المعروض على لوحة العرض بالغسالة يدوياً في تطبيق Smart Check (الفحص الذكي).

تنزيل تطبيق Smart Check (الفحص الذكي)

- قم بتنزيل تطبيق Samsung Laundry (الملابس من سامسونج) في هاتفك الجوال من سوق Android أو متجر تطبيقات آبل. (كلمة البحث: Samsung Smart Washer/Dryer)

الاحتياطات عند استخدام Smart Check (الفحص الذكي)

F900A_IB_DC68-03133M-05_AR.indd 23 2015/7/28 10:46:49

غسل الملابس

- إذا كان المصباح من بصيلة المصابيح، أو بصيلة فلورسنت أو المصباح يتم عكسه على لوحة العرض بالغسالة، فقد يتعذر على الهاتف الذكي التعرف على اللوحة أو رسالة الخطأ بسهولة.
- إذا قمت بإمساك الهاتف الذكي عند زاوية كبيرة للغاية نسبياً أمام مقدمة لوحة العرض، فقد يتعذر عليه التعرف على كود الخطأ. للحصول على أفضل النتائج، قم بإمساك الهاتف الذكي بحيث يكون في مقدمة اللوحة والهاتف الذكي متوازي أو شبه متوازي.

غسل الملابس باستخدام قرص تحديد الدورة

تتيح الغسالة الجديدة غسل الملابس بسهولة، باستخدام نظام "التحكم الذكي" الأوتوماتيكي من Samsung. عند اختيار أحد برامج الغسيل، تقوم الغسالة بضبط درجة الحرارة ووقت الغسل وسرعات الغسل المناسبة.

١. اضغط على الزر **Power (الطاقة)**.
٢. افتح الباب.
٣. قم بوضع كل الملابس مرة واحدة بشكل حر في الحلة، بدون ملئها عن آخرها.
٤. قم بإضافة مادة منظفة سائلة (أو مسحوق)، مادة منعمة، و/ أو مادة تبييض (إذا كان ذلك ضرورياً) في الحجيرات المناسبة. انظر صفحات ٢٥ - ٢٧.
٥. قم بإغلاق الغطاء.
٦. استخدم Cycle Selector (قرص تحديد الدورة) لتحديد الدورة المناسبة وفقاً لنوع المادة: Normal (عادي)، Heavy Duty (أداء ثقيل)، Water Saving (توفير الماء)، Towels (المناشف)، Infant Wear (ملابس الأطفال)، Sanitize (تعقيم)، Bedding (شراشف)، Eco Tub Clean (تنظيف الحوض)، Perm Press (تنشيف مموج)، Active Wear (ملابس رياضية)، Delicates/Hand Wash (غسيل يدوي/ناعم)، Wool (صوف)، Quick Wash (الغسيل السريع)، Spin (دوران)، Spin + Rinse (دوران + شطف). ستتم إضاءة المؤشرات ذات الصلة على لوحة التحكم.
٧. في هذه المرة، يمكنك التحكم في درجة حرارة الغسيل، وعدد دورات الشطف، وسرعة الدوران، ووقت التأخير عن طريق الضغط على زر الخيار الملائم.
٨. اضغط على زر **Start/Pause (تشغيل/توقف)** على محدد الدورة وسيتم بدء الغسيل. يضيء مؤشر العملية ويظهر الوقت المتبقي للدورة على الشاشة.

خيار الإيقاف

لإضافة أو إزالة قطع من الغسالة، اتبع الخطوات التالية:

١. اضغط على زر **Start/Pause (تشغيل/توقف)** لفك قفل الغطاء.

لا يمكن فتح الغطاء عندما يكون الماء ساخن للغاية.

٢. قم بإخراج الملابس أو وضعها.
٣. قم بغلق الغطاء، ثم اضغط على زر **Start/Pause (تشغيل/توقف)** لبدء الغسيل.

إذا قمت بتشغيل قفل الأطفال، فيجب عليك إلغاء تنشيطه أولاً. انظر صفحة ٢١.

عند انتهاء الدورة:

بعد انتهاء دورة الغسل بالكامل، يتم إيقاف الغسالة تلقائيًا.

١. افتح الباب.
٢. أخرج الملابس.

F900A_IB_DC68-03133M-05_AR.indd 24 2015/7/28 10:46:49

وحدة التوزيع الأوتوماتيكية

يوجد بالغسالة الخاصة بك حجيرات مستقلة لتوزيع المادة المنظفة ومادة التبييض الآمنة على الألوان والمادة المنعمة للملابس. قم بإضافة جميع إضافات الغسالة إلى حجيراتها الخاصة قبل بدء تشغيل غسالتك.

يجب أن تكون وحدة التوزيع الأوتوماتيكية دوماً في موضعها قبل بدء تشغيل غسالتك.

لا تقم بفتح وحدة التوزيع الأوتوماتيكية أثناء تشغيل غسالتك.

- لا تقم مطلقاً بتجاوز توصيات الجهة الصانعة عند إضافة المادة المنظفة.
- تستوعب هذه الحجيرة مادة منظفة سائلة لدورة الغسيل الرئيسية. وتتم إضافتها إلى الملابس المراد غسلها في بداية الدورة.
- عند استخدام المادة المنظفة على شكل مسحوق. قم بإزالة حجيرة المادة المنظفة السائلة من ساحب المادة المنظفة. لن تقوم الغسالة بتوزيع المادة المنظف على شكل مسحوق من حجيرة المادة المنظفة السائلة.

لإضافة المادة المنظفة إلى وحدة التوزيع الأوتوماتيكية:

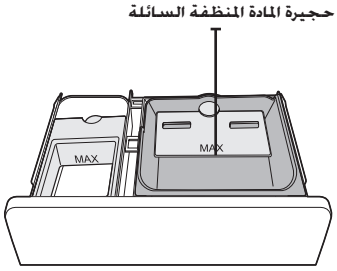

١. قم بفتح درج التوزيع.
٢. قم بوضع المقدار الموصى به من المادة المنظفة السائلة (أو المسحوق) في حجيرة المادة المنظفة قبل بدء تشغيل غسالتك.
٣. قم بغلق الدرج ببطء وبسلاسة لتفادي أي انسكاب أو رذاذ أو توزيع سابق لأوانه من المحتويات.

من الطبيعي أن تظل كمية صغيرة من الماء في حجيرة التوزيع في نهاية الدورة.

لا تضع مادة تبيض تحتوي على الكلور في درج التوزيع.

F900A_IB_DC68-03133M-05_AR.indd 25 2015/7/28 10:46:49

غسل الملابس

تحميل حجيرة المادة المنظفة السائلة (أو المسحوق)

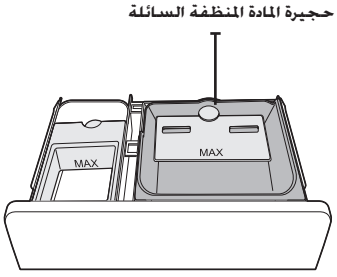

١. قم بصب المقدار الموصى به من المادة المنظفة للغسيل مباشرة في حجيرة المادة المنظفة قبل بدء تشغيل غسالتك.

٢. إذا كنت تستخدم مادة تبييض آمنة على الألوان، فقم بإضافتها مع المادة المنظفة في حجيرة المادة المنظفة.

عند إضافة مادة تبيض آمنة على الألوان مع المادة المنظفة، فمن الأفضل إذا كانت منتجات الغسيل من نفس التشكيلة- سائلة.

عند استخدام المادة المنظفة على شكل مسحوق، قم بإزالة حجيرة المادة المنظفة السائلة من ساحب المادة المنظفة. لن تقوم الغسالة بتوزيع المادة المنظف على شكل مسحوق من حجيرة المادة المنظفة السائلة.

الوضع في حجيرة مادة التبييض

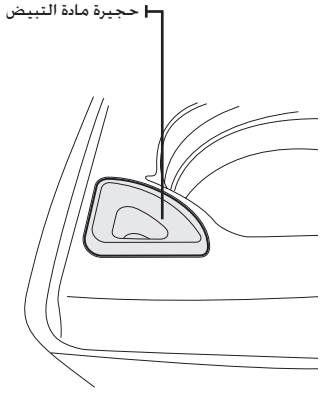

(مادة التبييض السائلة التي تحتوي على الكلور فقط)

١. قم بإضافة مادة الكلور المبيضة في حجيرة مادة التبييض.
لا تتجاوز سطر أقصى حد للملء (MAX FILL).

- تجنب الرش أو الملء الزائد في الحجيرة.
- تقوم غسالتك بتوزيع مادة التبييض في الحوض بالوقت الملائم.

٢. ستقوم وحدة التوزيع بإذابة مادة الكلور المبيضة قبل الوصول إلى حد حمولة الغسيل.

- لا تقم مطلقاً بصب مادة الكلور المبيضة السائلة غير المخففة مباشرة في الملابس الموضوعة أو في الحوض. فهي من المواد الكيمياوية القوية التي قد تؤدي إلى تلف الأقمشة والملابس كإضعاف الأنسجة أو فقدان الألوان. إذا لم يتم استخدامها بطريقة ملائمة.
- إذا كنت تفضل استخدام مادة التبييض الآمنة على الملابس الملونة ولا تحتوي على الكلور، فقم بإضافتها في حجيرة المادة المنظفة الملائمة.

لا تقم بصب مادة التبيض الآمنة على الملابس الملونة في حجيرة مادة التبييض.

F900A_IB_DC68-03133M-05_AR.indd 26 2015/7/28 10:46:49

تحميل حجيرة المادة المنعمة للأقمشة

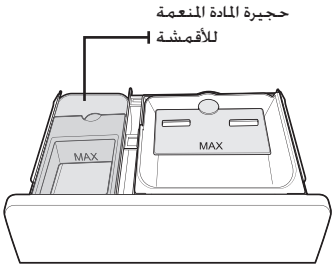

١. قم بصب الكمية الموصى بها من المادة المنعمة للأقمشة السائلة في حجيرة المادة المنعمة.
بالنسبة للملابس الموضوعة بالغسالة الأصغر حجماً، استخدم مقدار أقل.
٢. قم بتخفيف المادة المنعمة للأقمشة بالماء حتى تصل إلى العلامة MAX FILL (أقصى حد للملء) في الحجيرة.
٣. حرر وحدة التوزيع المادة المنعمة للأقمشة السائلة أوتوماتيكياً في الوقت المناسب أثناء دورة الشطف.

- استخدم حجيرة المادة المنعمة فقط لوضع المواد المنعمة للأقمشة السائلة فقط.
- لا تستخدم مادة Downy Ball* في حجيرة المادة المنظفة للأقشمة مع هذه الغسالة. لن يؤدي ذلك إضافة المادة المنعمة للأقمشة في الوقت المناسب. استخدم حجيرة المادة المنظفة.
- لا تستخدم المادة المنعمة للأقمشة السائلة التي تكون دبقة للغاية حيث قد لا تختلط مع الماء بشكل كافي.
- أسماء الأصناف هي علامات تجارية للجهات الصانعة ذات الصلة.

F900A_IB_DC68-03133M-05_AR.indd 27 2015/7/28 10:46:49

صيانة الغسالة

تنظيف الأسطح الخارجية

قم بإيقاف حنفيات المياه بعد الانتهاء من الغسيل اليومي.

سيؤدي هذا إلى إيقاف إمداد الماء إلى غسالتك ومنع إمكانية التلف المحتمل الناجم عن تسرب الماء. قم بترك الغطاء مفتوحاً بما يتيح تجفيف الجزء الداخلي من غسالتك.

استخدم قطعة قماش ناعمة لمسح كل المادة المنظفة، أو مادة التبيض أو غيرها من القطرات المنسكبة عند وقوعها.

قم بالتنظيف حسبما هو موصى به:

لوحة التحكم - نظف باستخدام قطعة قماش ناعمة رطبة. لا تستخدم مساحيق حاكة أو بطانات التنيظف. لا تقم برش المنظفات مباشرة على اللوحة.

تنظيف الجزء الداخلي

قم بتنظيف الجزء الداخلي من غسالتك بشكل دوري لإزالة أي أوساخ أو أتربة أو روائح كريهة أو طين، أو عفن أو بقايا بكترية قد تظل بداخل غسالتك نتيجة لغسيل الملابس.

عدم الالتزام باتباع هذه التعليمات قد يؤدي إلى حدوث حالات غير سارة بما في ذلك الروائح الكريهة، و/ أو البقع الدائمة في غسالتك أو ملابسك.

يجوز إزالة رواسب الماء العسر إذا استدعت الضرورة القيام بذلك. استخدم المنظفات التي يوجد عليها عنوان "آمن للغسالات".

تخزين الغسالة

قد تتلف الغسالة إذا لم تتم إزالة الماء من الخراطيم والمكونات الداخلية قبل التخزين. قم بتحضير غسالتك من أجل تخزينها على النحو التالي:

- حدد دورة Quick Wash (الغسيل السريع) وقم بإضافة مادة التبييض في وحدة التوزيع الأوتوماتيكية. قم بتشغيل غسالتك من خلال دورة لا توجد بها حمولة ملابس.
- قم بإيقاف حنفيات المياه وفصل الخراطيم المدخلة.
- قم بفصل غسالتك من مصدر التيار الكهربائي وترك غطاء غسالتك مفتوحاص بما يتيح تدوير الهواء بداخل الحلة.
- إذا تم تخزين غسالتك في درجة حرارة أقل من درجة حرارة التجمد، فاترك وقت يمر لتطاير أي ماء متبقي في غسالتك قبل الاستخدام.

الحفاظ على الغطاء العلوي والإطار الأمامي

لا تقم بوضع أي أشياء ثقيلة أو حادة أو صندوق المادة المنظفة على الغسالة. فقد تؤدي إلى حدوث خدوش أو تلف الغطاء العلوي من الوحدة.

ولكون الغسالة الكهربائية مزودة بطبقة طلاء مصقولة بدرجة عالية، فقد يصاب السطح بخدوش أو تلف. تجب الخدوش أو التلف بالسطح عند استخدام الغسالة الكهربائية.

F900A_IB_DC68-03133M-05_AR.indd 28 2015/7/28 10:46:49

تنظيف وحدات التوزيع

قد تحتاج وحدة التوزيع الأوتوماتيكية إلى التنظيف بشكل دوري بسبب تراكم المواد الإضافية الخاصة بالغسيل.

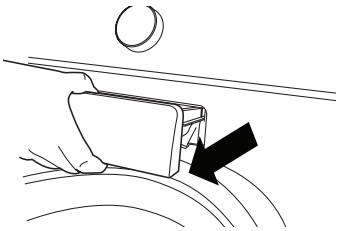

١. قم بسحب درج التوزيع بشكل مباشر للخلف حتى يتوقف عن الحركة.

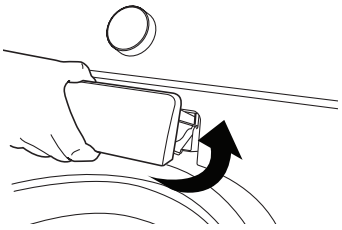

٢. قم بإمالة درج التوزيع لأعلى ثم إخراجه.

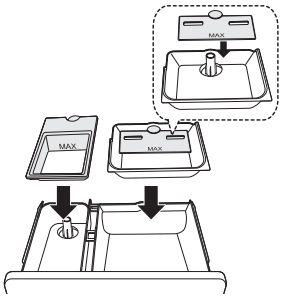

٣. قم بإخراج المدرجات من الحجيرات البالغ عددها ٣. قم بشطف المدرجات والدرج بالماء الدافي لإزالة أي بقايا وآثار من منتجات الغسيل المتراكمة.

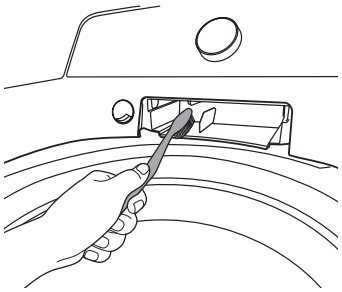

٤. لتنظيف فتحة الدرج، استخدم فرشاة صغيرة غير معدنية لتنظيف التجويف. قم بإزالة كل البقايا من الأجزاء العلوية والسفلية من التجويف.

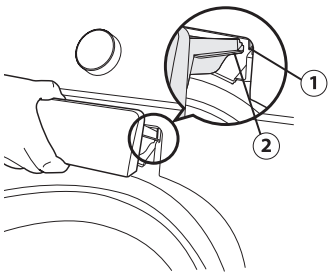

٥. قم بإعادة المدرجات إلى حجيراتها الملائمة الخاصة بها ووضع الدرج. عن طريق وضع قضيب الدرج ② على الجزء العلوي من قضيب الحجيرة ① (إمالة درج التوزيع لأسفل وإدخاله.)، ثم دفع الدرج بثبات وببطء.

F900A_IB_DC68-03133M-05_AR.indd 29 2015/7/28 10:46:49

صيانة الغسالة

ECO TUB CLEAN (تنظيف الحوض)

تنظيف الحوض هي دورة تنظيف ذاتية تعمل على إزالة العفن والأتربة التي قد تتواجد بداخل الغسالة.

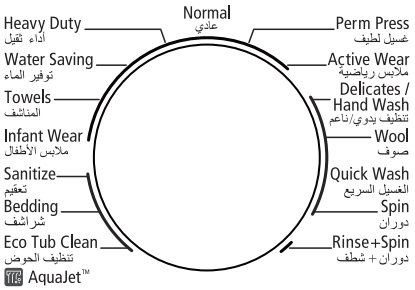

١. اضغط على الزر **Power (الطاقة)**.
٢. حدد برنامج **Eco Tub Clean (تنظيف الحوض)**.
- بعد تحديد برنامج Eco Tub Clean (تنظيف الحوض)، الوظيفة الوحيدة التي يمكن ضبطها تكون هي بدء متأخر.

٣. اضغط على الزر **Start/Pause (تشغيل/توقف)**.
- إذا قمت بالضغط على زر **Start/Pause (تشغيل/توقف)**، تبدأ عملية Eco Tub Clean (تنظيف الحوض).

تنبيه

- باستخدام خيار Eco Tub Clean (تنظيف الحوض)، يمكنك القيام بتنظيف الحوض باستخدام مادة منظفة.
- لا تستخدم مطلقاً خيار Eco Tub Clean (تنظيف الحوض) عند وجود الملابس المراد غسلها في الغسالة. فقد يؤدي هذا إلى حدوث تلف بالملابس أو مشكلة في الغسالة.

وظيفة المؤشر الأوتوماتيكي لخيار تنظيف الحوض

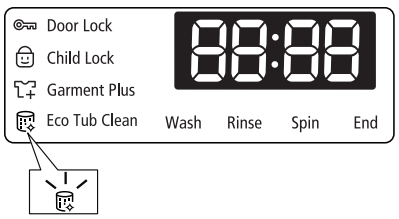

- في حالة إضاءة مؤشر "**Eco Tub Clean (تنظيف الحوض)**" بعد الغسيل، فهذا يدل على أنه يلزم تنظيف الحوض (الحلة). في هذه الحالة، قم بإخراج الملابس من الغسالة، وتشغيل الطاقة، وتنظيف الحوض عن طريق تشغيل خيار تنظيف الحوض.
- إذا لم تقم بتشغيل خيار تنظيف الحوض، فسيتم إيقاف مؤشر "**Eco Tub Clean (تنظيف الحوض)**". ومع ذلك، فقد تتم إضاءة مؤشر **Eco Tub Clean (تنظيف الحوض)** مرة أخرى بعد دورتي غسيل. عدم تشغيل خيار تنظيف الحوض في هذه المرحلة لن يؤدي إلى حدوث مشكلة في الغسالة.
- على الرغم من أن مؤشر تنظيف الحوض يظهر مرة واحدة في الشهر أو ما شابه ذلك، فقد يختلف عدد مرات الظهور بحسب عدد الأوقات التي يتم خلالها استخدام الغسالة.

F900A_IB_DC68-03133M-05_AR.indd 30 2015/7/28 10:46:50

استكشاف الأخطاء وإصلاحها

تحقق من هذه الحلول إذا كانت غسالتك...

المشكلة	الحل
لا يتم بدئها.	• تأكد من أن الغطاء مغلق. • تأكد من أن قابس غسالتك متصل. • تأكد من أن حنفيات مصدر المياه مفتوحة. • تأكد من قيامك بالضغط على زر بدء/ إيقاف مؤقت لبدء غسالتك. • تأكد من أن قفل الأطفال غير نشط. انظر صفحة ٢١. • قبل بدء الغسالة في الامتلاء، قد تقوم بإجراء سلسلة من الضوضاء على شكل طقطقة للتحقق من قفل الغطاء وإجراء دورة تصريف سريعة. • افحص المصهر أو إعادة ضبط قاطع الدائرة.
عدم وجود ماء أو عدم وجود ماء كافٍ.	• قم بفتح الحنفيتين تماماً. • قم بتعديل خراطيم إدخال الماء. • قم بفصل الخراطيم وتنظيف الحواجز. قد تكون حواجز فلتر الخرطوم بها انسداد.
توجد بقايا منظف في وحدة التوزيع الأوتوماتيكية بعد إنتهاء دورة الغسيل.	• تأكد من أن غسالتك تعمل مع ضغط ماء كافي.
تهتز الغسالة أو تحدث صوتاً مرتفعاً.	• تأكد من أن غسالتك مضبوطة على سطح مستوي. إذا كان السطح غير مستوي، فقم بضبط قدم الغسالة لضبط استواء الجهاز. • تأكد من أن غسالتك لا تتلامس مع أي شيء آخر. • تأكد من توزيع وزن الملابس الموجودة في الغسالة.
توقف	• قم بتوصيل سلك الطاقة في مصدر تيار كهربائي مباشر. • افحص المصهر أو إعادة ضبط قاطع الدائرة. • قم بغلق الغطاء واضغط على زر بدء/ إيقاف مؤقت لبدء تشغيل غسالتك. لدواعي تتعلق بالسلامة، فقد لا تقوم غسالتك بالدوران ما لم يتم غلق الغطاء. • قبل بدء الغسالة في الامتلاء، قد تقوم بإجراء سلسلة من الضوضاء على شكل طقطقة للتحقق من قفل الغطاء وإجراء دورة تصريف سريعة. • قد يوجد إيقاف مؤقت أو فترة نقع في الدورة. انتظر وقد يتم البدء. • افحص الحواجز في خراطيم الإدخال بالحنفيات للتحري عن أي انسداد. • قم بتنظيف الحواجز بشكل دوري.
ملء بماء ذو درجة حرارة خاطئة.	• قم بفتح الحنفيتين تماماً. • تأكد من أن تحديد درجة الحرارة صحيح. • تأكد من أن الخراطيم متصلة بالحنفيات الملائمة. قم بوضع خطوط الماء. • قم بفصل الخراطيم وتنظيف الحواجز. قد تكون حواجز فلتر الخرطوم بها انسداد. • عندما يتم ملء غسالتك بالماء، فقد يحدث تغيير لدرجة حرارة الماء أثناء قيام ميزة التحكم بدرجة الحرارة أوتوماتيكياً بالتحقق من درجة حرارة الماء القادم. وهذا أمر طبيعي. • أثناء ملء غسالتك بالماء، فقد تلاحظ أن الماء الساخن فقط، و/ أو الماء البارد فقط ينطلق عبر وحدة التوزيع عند اختيارك لدرجات حرارة الغسيل بالماء الساخن أو البارد. هذه الوظيفة الطبيعية لخاصية التحكم بدرجة الحرارة أوتوماتيكياً عندما تحدد غسالتك درجة حرارة الماء.
الغطاء مقفل أو لن يتم فتحه.	• اضغط على زر بدء/ إيقاف مؤقت لإيقاف غسالتك. • قد يستغرق الأمر بعض لحظات حتى يتم فك تعشيق آلية قفل الغطاء.
عدم التصريف، و/ أو الدوران.	• افحص المصهر أو إعادة ضبط قاطع الدائرة. • قم بتسوية خراطيم التصريف. قلل من استخدام الخراطيم الملتوية. إذا لم توجد أي إعاقة للتصريف، فاتصل بالخدمة. • قم بغلق الغطاء واضغط على زر بدء/ إيقاف مؤقت. لدواعي تتعلق بالسلامة، فقد لا تقوم غسالتك بالدوران ما لم يتم غلق الغطاء.

F900A_IB_DC68-03133M-05_AR.indd 31 2015/7/28 10:46:50

استكشاف الأخطاء وإصلاحها

المشكلة	الحل
الحمولة رطبة للغاية في نهاية الدورة.	• استخدم سرعة دوران عالية. • استخدم مادة منظفة عالية الفعالية لخفض الرغاوي الزائدة. • الحمولة (كمية الملابس) صغيرة جداً. الحمولات الصغيرة للغاية (شيء واحد أو شيئين) قد تؤدي إلى عدم التوازن وعدم الدوران بشكل كامل.
تسرب الماء.	• تأكد من أن كل وصلات الخرطوم محكمة الربط. • تأكد من إدخال طرف خرطوم التصريف بطريقة صحيحة وتثبيته في نظام التصريف. • تجنب التحميل الزائد. • استخدم مادة منظفة عالية الفعالية لمنع الرغاوي الزائدة.
تكون رغوات بشكل مفرط.	• استخدم مادة منظفة عالية الفعالية لمنع الرغاوي الزائدة. • خفض كمية المادة المنظفة للماء اليسر. حمولات متسخة بأوساخ صغيرة أو بسيطة. • لا يوصى باستخدام مادة منظفة HE.
ذات باب.	• تحقق من المنظف. تكون رغوات بشكل مفرط في الأركان والزوايا مما قد يُسبب روائح غريبة. • قم بتشغيل دورات التنظيف لتعقيم الغسالة بشكل دوري منتظم Silver Care (عناية عالية) أو Sanitize Cycle (دورة التعقيم) أو Eco Tub Clean (تنظيف الحوض). • جفف الجزء الداخلي من الغسالة بعد إكتمال دورة الغسيل.

F900A_IB_DC68-03133M-05_AR.indd 32 2015/7/28 10:46:50

رموز المعلومات

قد تعرض الغسالة أكواد المعلومات بما يساعدك على فهم ما يحدث لغسالتك بشكل أفضل.

رمز الكود	المعنى	الحل
1E	مستشعر مستوى الماء لا يعمل بطريقة صحيحة. عند ظهور الكود "1E" على شاشة عرض الغسالة، فإن ذلك يعني أن الغسالة ستقوم بعملية الصرف لمدة ٣ دقائق. يُرجى العلم أن زر التشغيل لا يستجيب للضغط عليه خلال هذه الفترة.	اتصل بالخدمة.
4E	حاولت غسالتك ملء الماء لكن المحاولة لم تنجح. عند ظهور الكود "4E" على شاشة عرض الغسالة، فإن ذلك يعني أن الغسالة ستقوم بعملية الصرف لمدة ٣ دقائق. يُرجى العلم أن زر التشغيل لا يستجيب للضغط عليه خلال هذه الفترة. افحص وتأكد من أن خرطوم إمداد الماء الساخن متصل	تأكد من أن حنفيات المياه مفتوحة تماماً. تحقق من وجود خراطيم ملتوية. افحص حواجز الإدخال في خراطيم الملء. إذا كنت تستخدم جهاز السلامة ضد الغمر، فالرجاء إزالة هذا الجهاز ثم توصيل خراطيم المياه مباشرة بالوحدة. يجب عليك توصيل خرطوم إمداد الماء الساخن لكون الماء الساخن قادم من وظيفة التحكم بدرجة الحرارة أوتوماتيكياً (A.T.C.).
5E	لا تقوم غسالتك بالتصريف. قد يعني ذلك أن الوحدة تستشعر وجود انسداد صغير أثناء التصريف.	قم بفعل التالي: ١) قم بإيقاف تشغيل الوحدة ثم إعادة تشغيلها. ٢) حدد دورة الدوران فقط. ٣) اضغط على بدء/ إيقاف مؤقت لتصريف المياه. إذا استمرت مشكلة عدم التصريف، فالرجاء الاتصال بمركز الخدمة.
LE	حاولت الغسالة الامتلاء بالماء لكنها لم تصل إلى مستوى الماء المناسب. عند ظهور الكود "LE" على شاشة عرض الغسالة، فإن ذلك يعني أن الغسالة ستقوم بعملية الصرف لمدة ٣ دقائق. يُرجى العلم أن زر التشغيل لا يستجيب للضغط عليه خلال هذه الفترة.	اتصل بالخدمة.
UE	حمولة الملابس غير المتوازنة منعت الغسالة من الدوران.	قم بإعادة توزيع الحمولة، واضغط على زر بدء/ إيقاف مؤقت.
dE	الغطاء مفتوحاً أثناء تشغيل الغسالة.	قم بغلق الغطاء بإحكام وإعادة بدء الدورة. إذا تكرر ظهور الكود، فاتصل بمركز الخدمة.
dE1	مفتاح الباب لا يعمل بطريقة صحيحة.	انتظر لمدة ٢- ٣ دقائق قم بتشغيل الغسالة مرة أمري وأعد التشغيل مرة أخري من البداية. إذا كانت المشكلة باقية دون حل، فاتصل بمركز الخدمة.
E2	مفتاح منحشر.	اتصل بالخدمة.
3E	عدم تشغيل الموتور بطريقة ملائمة.	قم بإعادة بدء الدورة بالضغط على زر بدء/ إيقاف مؤقت. إذا تكرر ظهور الكود، فاتصل بمركز الخدمة.
AE	خطأ بالتوصيل بين SUB PBA، وMAIN PBA	اتصل بالخدمة.

F900A_IB_DC68-03133M-05_AR.indd 33 2015/7/28 10:46:51

استكشاف الأخطاء وإصلاحها

رمز الكود	المعنى	الحل
	مشكلة في مستشعر Mems.	اتصل بالخدمة.
	مشكلة في مستشعر درجة الحرارة.	قم بإعادة بدء الدورة. إذا تكرر ظهور الكود، فاتصل بمركز الخدمة.
	تم الكشف عن الخلل في مستشعر مستوى الماء.	اتصل بالخدمة.
	تحدث هذه المشكلة عندما تتخطي درجة الحرارة ٥٠ لمدة تتجاوز ٨ ثوان في برنامج Wool (صوف) و Delicates (أنسجة رقيقة).	اتصل بالخدمة.
	عندما لا يسعك تحديد موضع القابض.	اتصل بالخدمة.
	إذا ظلت الاشارة موضع القابض تشير إلي وقوع خطأ رغم التعرف علي موضع القابض.	اتصل بالخدمة.

بالنسبة للأكواد غير المسردة أعلاه، الرجاء الاتصال بالرقم 9200-21230

F900A_IB_DC68-03133M-05_AR.indd 34 2015/7/28 10:46:52

الملحق

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن ملصقات الرعاية بالملابس رموزاً خاصة يجب مراعاتها عند الغسيل، التبييض، التجفيف، الكي أو التعرض للتجفيف حسب الضرورة.. يضمن استخدام هذه الرموز التناسق بين الشركات المصنعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

دورة الغسيل		إرشادات خاصة		رموز تحذيرية في عملية الغسيل	
Normal (عادي)			تجفيف على الحبل/ تعليق للتجفيف		لا تغسل
الملابس المقاومة للتجاعيد / منعالكرمشة / التحكم في الكرمشة			التجفيف بالتعليق		لا تضغط
الملابس الناعمة/الرقيقة			تجفف وهي مفرودة		لا تستخدم مادة تبييض
غسل يدوي		إعدادات التسخين			لا تجفف بالتدوير
لا تجفف بالتدوير**			High (عالي)		لا يوجد بخار (يُضاف للكي)
●●●	Hot (حار)		Medium (وسط)		ممنوع الكي
●●	Warm (دافئ)		Low (منخفض)	تنظيف جاف	
●	Cold (بارد)		أي درجة من السخونة		تنظيف جاف
مادة تبييض			بدون تسخين/هواء		ممنوع استخدام التنظيف الجاف
	أي مادة تبييض (عند الحاجة)	التجفيف بالكي أو درجات حرارة البخار			تجفيف على الحبل/ تعليق للتجفيف
	خالي من الكلور فقط (لون آمن) مادة تبييض (عند الحاجة)		High (عالي)		التجفيف بالتعليق
	دورة تجفيف بالتدوير		Medium (وسط)		تجفف وهي مفرودة
Normal (عادي)			Low (منخفض)		
	الملابس المقاومة للتجاعيد / منعالكرمشة / التحكم في الكرمشة				
	الملابس الناعمة/الرقيقة				

** الرموز المنقطة تمثل درجات حرارة ماء الغسيل الملائمة بالنسبة للأشياء المتعددة. يتراوح نطاق درجة الحرارة الخاص بإعداد Hot (ساخن) بين ٤١ - ٥٢ درجة مئوية وبالنسبة لإعداد Warm (دافئ) ٢٩ - ٤١ درجة مئوية وبالنسبة ل Cold (البارد) ١٦ - ٢٩ درجة مئوية. (يتعين أن يكون الحد الأدنى لدرجة حرارة مياه الغسيل ١٦ درجة مئوية لتنشيط المسحوق والتنظيف الفعال.) غسالة الملابس لا يمكنها ضمان الحصول على درجات الحرارة هذه لكون درجة الحرارة الفعلية للماء الداخل إلى غسالتك يعتمد على إعدادات سخان الماء ودرجات حرارة إمداد الماء الموضعية. فعلى سبيل المثال، الماء البارد الداخل للمنزل في الولايات الشمالية أثناء الشتاء قد تكون ٤٠ درجة فهرنهايتية / ٤ درجة مئوية وهو ماء بارد للغاية لكي تحصل على تنظيف فعال. في هذه الحالة، سوف تحتاج إلى ضبط درجة حرارة الماء عن طريق تحديد إعداد ساخن، وإضافة بعض الماء الساخن إلى خط MAX FILL (الحد الأقصى للملء)، أو استخدام خيار التسخين بغسالتك، إذا كان متوافراً.

F900A_IB_DC68-03133M-05_AR.indd 35 2015/7/28 10:46:52

الملحق

جدول الدورات

استخدم هذا الجدول لضبط أفضل الخيارات والدورة الأفضل بالنسبة للملابسك المراد غسلها.

(●: إعداد المصنع. ●: قابل للتحديد)

الدورة	الوظائف									
	Water Level (مستوي الماء)	Temp. (درجة الحرارة)					Spin (دوران)			
		EH	H	W	EW	C	EH	H	M	L	NS
Normal (عادي)	١ ~ ٥			●	●	●	●	●	●	●	●
Heavy Duty (أداء ثقيل)	١ ~ ٥		●	●	●	●	●	●	●	●	●
Water Saving (توفير الماء)	١ ~ ٥		●	●	●	●	●	●	●		●
Towels (المناشف)	١ ~ ٥		●	●	●	●	●	●	●	●	●
Infant Wear (ملابس الأطفال)	١ ~ ٥		●	●	●	●	●	●	●	●	●
Sanitize (تعقيم)	١ ~ ٥	●					●	●	●	●	●
Bedding (شراشف)	١ ~ ٥		●	●	●	●		●	●	●	●
Eco Tub Clean (تنظيف الحوض)	٤		●						●		
Perm Press (تنشيف موج)	١ ~ ٥		●	●	●	●	●	●	●	●	●
Active Wear (ملابس رياضية)	١ ~ ٥			●	●	●			●	●	●
Delicates/Hand Wash (غسيل يدوي/ناعم)	١ ~ ٥			●	●	●			●	●	●
Wool (صوف)	١ ~ ٥			●	●	●				●	●
Quick Wash (الغسيل السريع)	١ ~ ٥		●	●	●	●	●	●	●	●	●
Spin (دوران)	-						●	●	●	●	●
Spin + Rinse (دوران + شطف)	١ ~ ٥					●	●	●	●	●	●

الدورة	خيارات							
	AquaJet™ Deep Clean (تنظيف عميق)	AquaJet™ Delicate Wash (غسيل ناعم)	Eco Plus (توفير زائد)	My Cycle (الدورة المفضلة)	Delay Start (بدء متأخر)	Power Wash (غسيل قوي)	Extra Rinse (شطف إضافي)	Pre Soak (قبل النقع)
Normal (عادي)	●		●	●	●	●	●	●
Heavy Duty (أداء ثقيل)	●		●	●	●	●	●	●
Water Saving (توفير الماء)	●		●	●	●	●	●	●
Towels (المناشف)	●		●	●	●	●	●	●
Infant Wear (ملابس الأطفال)	●		●	●	●	●	●	●
Sanitize (تعقيم)				●	●	●	●	●
Bedding (شراشف)			●	●	●	●	●	●
Eco Tub Clean (تنظيف الحوض)					●			
Perm Press (تنشيف موج)	●		●	●	●	●	●	●
Active Wear (ملابس رياضية)	●		●	●	●		●	●
Delicates/Hand Wash (غسيل يدوي/ناعم)		●		●	●		●	
Wool (صوف)				●	●		●	
Quick Wash (الغسيل السريع)				●	●	●	●	
Spin (دوران)				●	●			
Spin + Rinse (شطف + دوران)	●			●	●		●	

Temp. (درجة الحرارة)	Spin (دوران)	Water Level (مستوي الماء)
EH: Extra Hot (حرارة إضافية)	EH: Extra High (عالي إضافي)	٥
H: Hot (حار)	H: High (عالي)	٤
W: Warm (دافئ)	M: Medium (وسط)	٣
EW: Eco Warm (دافئ موفر للطاقة)	L: Low (منخفض)	٢
C : Cold (بارد)	NS: No Spin (بدون دوران)	١

F900A_IB_DC68-03133M-05_AR.indd 36 2015/7/28 10:46:52

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. قم بإزالة الغطاء حتى لا تنحشر الحيوانات والأطفال الصغار بداخل الجهاز.
- لا تضع مسحوق غسيل أكثر من الكمية المبينة في إرشادات الشركة المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسيل عند الحاجة فقط.
- وفر الماء والكهرباء من خلال إجراء الغسيل بأوزان كاملة (تختلف الكمية وفقاً للبرنامج المستخدم)..

المواصفات

النوع	غسالة علوية التحميل	
الأبعاد	Div	بوصة (سم)
	A. ارتفاع	٤٤,٧ (١١٣,٥)
	B. عرض	٢٧,٠ (٦٨,٦)
	C.الارتفاع عندما يكون الغطاء مفتوحاً	٥٨,١ (١٤٧,٦)
	D. عمق	٢٩,٣ (٧٤,٤)

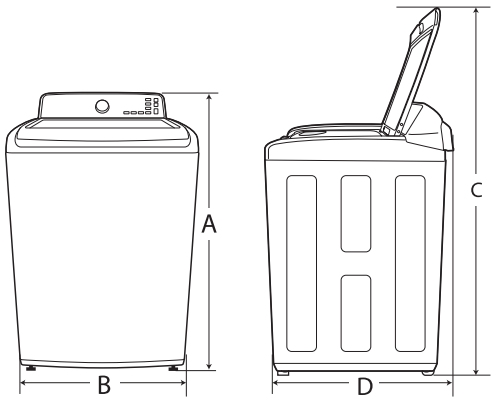

F900A_IB_DC68-03133M-05_AR.indd 37 2015/7/28 10:46:52

الملحق

اسم الجهة المصنعة و/ أو العلامة التجارية				SAMSUNG
بلد المنشأ				صنع في الصين
الموديل				WA20F9A8D**
نوع الغسالة				غسالة كهربية أوتوماتيكية
نظام الغسيل				غسالة كهربية ذات نظام vortex (فورتكس)
فرق الجهد الكهربي المسموح (الفولت)				٢٣٠فولت-
التردد المسموح به (هرتز)				٦٠ هرتز
قدرة الدخل المسموح بها (واط أو كيلو واط)	قدرة الدخل المسموح بها			١٧٠٠ واط
	المحرك الرئيسي			٥٠٠ واط
	محرك المضخة			٨٠ واط
	جهاز تدفئة المياه			١٥٠٠ واط
مستوى المياه	عالي إضافي	عالي	وسط	منخفض
سعة الغسيل	٢٠ كجم	١٢ كجم	٨ كجم	٤ كجم
كمية المياه	١٤٠ لتر	١٢٠ لتر	٦٥ لتر	٥٥ لتر
فئة الغسالة				الفئة ا
رقم IP				IPX٤
أقصى ضغط مسموح به للمياه الداخلة إلى الغسالة				٨٠٠ كيلوباسكال
أقل ضغط مسموح به للمياه الداخلة إلى الغسالة				١٣٧ كيلوباسكال
الكمية القياسية المياه المستخدمة (لتر)				٢٧٥ لتر
الوزن الصافي				٦٦ كجم
دورات التنشيف				١١٠٠ دورة في الدقيقة

- يُمنع تثبيت الغسالة على سطح رطب.
- يتعين ايقاف تشغيل العصارة في حالة عدم الأستخدام.
- يُحظر السماح للأطفال بتشغيل الغسالة.
- إن مظهر ومواصفات الغسالة عرضة للتغيير دونما إشعار مسبق وذلك لأغراض تطوير المنتج.
- يجب عدم وضع اليدين في أنبوب صرف الماء.
- إذا كان من الممكن فتح غطاء الغسالة أثناء تصريف المياه أو كانت تستغرق ١٥ ثانية أو يزيد للإيقاف الكلي لصرف المياه من حجرة التصريف فإن يُجب التعامل مع الأمر على أنه مشكلة بالغسالة.

F900A_IB_DC68-03133M-05_AR.indd 38 2015/7/28 10:46:53

مذكرة

F900A_IB_DC68-03133M-05_AR.indd 39 2015/7/28 10:46:53

هل لديك أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت على
SAUDI ARABIA	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)

كود رقم. DC68-03133M-05_AR